

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing Kms	RECOMMENDED FREQUENCY						Subsequent	
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every 5000 Km after Previous Service				
			500 750	4500 5000	9500 10000					
1.	Water wash & dry the vehicle completely		<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	Ensure to prevent water entry in Petrol tank, Silencer & electrical Parts. Use caustic free detergent for washing.
2.	Engine oil (Bajaj DTSi 10000 oil)	C,R	<input type="checkbox"/> R	Top Up	<input type="checkbox"/> R	Top Up	<input type="checkbox"/> R	Top Up	<input type="checkbox"/> R	BGO DTSi 10W30 for 100cc models. BGO DTSi 20W50 for Models above 125cc.
3.	Engine oil filter	C,R	<input type="checkbox"/> R		<input type="checkbox"/> R		<input type="checkbox"/> R		<input type="checkbox"/> R	
4.	Oil strainer	CL	CL		CL		CL		CL	
5.	Body centrifugal filter**	CL	CL				CL		CL	
6.	Starter Clutch (Dry Type)**	L		L	L	L	L	L	L	Use recommended Molycote grease.
7.	Spark plug	CL,A,R			CL,A		CL,A		<input type="checkbox"/> R	
8.	Air cleaner element ***	CL,R	CL	CL	CL	<input type="checkbox"/> R	CL	CL	<input type="checkbox"/> R	

✓ Tick in the box  after replacing the periodic parts.

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing Kms	RECOMMENDED FREQUENCY							Subsequent
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every 5000 Km after Previous Service				
			500 ~ 750	4500 ~ 5000	9500 ~ 10000					
9.	Air filter cover 'O' ring	CL,R	CL	CL	CL	<input type="checkbox"/> R	CL	CL	<input type="checkbox"/> R	
10.	In line paper filter	R				<input type="checkbox"/> R			<input type="checkbox"/> R	
11.	Fuel cock paper filter.	R				<input type="checkbox"/> R			<input type="checkbox"/> R	
12.	Fuel cock sediment bowl cleaning	CL				CL			CL	
13.	Carburettor rubber duct	C,R					C,R			
14.	Fuel pipe	C,R	C	C	C	<input type="checkbox"/> R	C	C	<input type="checkbox"/> R	
15.	Valve tappet clearance	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
16.	Non-Sealed drive chain cleaning & lubrication	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	
17.	Sealed drive chain cleaning & lubrication	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	Customer to apply OKS chain lub spray at every 500 kms.
18.	Engine air breather tube	C	C	C	C	C	C	C	C	
19.	Silencer drain hole cleaning	CL		CL	CL	CL	CL	CL	CL	

✓ Tick in the box  after replacing the periodic parts.

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY							Subsequent
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
			500 750	4500 5000	9500 10000	5000 Km after Previous Service				
20.	Silencer tail pipe cleaning**	CL		CL	CL	CL	CL	CL	CL	
21.	Brake cam & brake pedal pivot pin	C,L,R	C	C,L,R	C,L,R	C,L,R	C,L,R	C,L,R	C,L,R	Use AP grease.
22.	Brake lining or pad - Check wear indicator		C,R	C,R	C,R	<input type="checkbox"/>	C,R	C,R	<input type="checkbox"/>	
23.	Brake fluid level **- top up / replace	C,A,R				C,A			<input type="checkbox"/>	Use recommended brake fluid (DOT3/DOT4)
24.	Disc brake assly -- Check functionality, leakage or any other damage.	C			C		C		C	
25.	All cables & rear brake pedal-free play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
26.	Battery electrolyte level, specific gravity	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	Not applicable for VRLA battery
27.	Wiring harness & Battery connections- routing, tie bands & clamps tightness.	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	
28.	Ignition switch barrel cleaning	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	Use WD40 spray

✓ Tick in the box  after replacing the periodic parts.

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY							Subsequent
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
			500 Kms	4500 ~ 5000	9500 ~ 10000	5000 Km after Previous Service				
29.	Handle bar control switches contacts cleaning	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	Use WD40 spray
30.	Steering play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
31.	Steering stem bearing*** & Cap steering bearing (Plastic)**	C,CL,L,R			C,CL, L,R		C,CL, L,R		C,CL, L,R	Check & replace if Damaged. Use HP Lithon RR3 grease for lubrication.
32.	Main stand & side stand pin**	CL,L			CL,L		CL,L		CL,L	Use AP grease.
33.	Swing arm pivot pin (for non silent bush)**	L		L	L	L	L	L	L	
34.	All fasteners tightness	C,T	C,T	C,T	C,T	C,T	C,T	C,T	C,T	
35.	Engine foundation silent bushes**	C				C			C	
36.	General lubrication-Clutch lever, front brake lever, kick lever.	L	L	L	L	L	L	L	L	Use AP grease.
37.	Idle speed / CO%	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	

✓ Tick in the box  after replacing the periodic parts.

## Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY							Subsequent
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
			500 750	4500 5000	9500 10000	5000 Km after Previous Service				
38.	Coolant level in expansion tank**	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	Use recommended 'Ready to use coolant'.
39.	Coolant hose damage/clamps/leakage**	C		C	C	C	C	C	C	
40.	Radiator fins**	C		C	C	C	C	C	C	
41.	Spoke tightening**-Front & Rear	C,T	C,T	C,T	C,T	C,T	C,T	C,T	C,T	

✓ Tick in the box  after replacing the periodic parts.

\*\* As applicable to model

\*\*\* More frequent cleaning may be required while driving in dusty environment.

**C : Check, A : Adjust, CL : Clean, R : Replace, T : Tighten, L : Lubricate**

**Note :** Periodic parts, Oil, Coolant, Filters, All types of greases, Cleaning agents, Cables, Wear & tear parts, Rubber 'O' rings / oil seals / pipes, Gaskets to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.