

## Periodic Maintenance & Lubrication Chart

Sr. No.	Operation		Which ever comes first ↓ OR	RECOMMENDED FREQUENCY					
				Kms.	Initial				Subsequent
					Days	750	2,500	5,000	
			30-45	105-120	195-210	285-300	Every 2,500km Every 90 days		
1.	Servicing			●	●	●	●	●	
2.	Idle speed / CO%	C,A		●	●	●	●	●	
3.	Valve tappet clearance	A				●		Every 5000 kms	
4.	Engine oil (SAE 20W50 of API SJ+JASO MA)	R		●		●		Every 5000 kms	
5.	Oil strainer / Centrifugal filter	CL						Every 10000 kms	
6.	Air cleaner element ✚	CL		●	●	●	●	●	
7.	Air cleaner element	R						Every 10000 kms	
8.	Carburettor	CL,A		●	●	●	●	●	
9.	Fuel system leakages	C,R		●	●	●	●	●	
10.	Fuel pipes	R						Every Year	
11.	Spark plug / gap	CL,A		●	●	●	●	●	
12.	Spark plugs (2 Nos.)	R						Every 10000 kms	
13.	Battery electrolyte level	C,A		●	●	●	●	Every Year	
14.	Brake light switch	C,A		●	●	●	●	●	
15.	Oil cooler pipes	C,R		●	●	●	●	●	
16.	Clutch play	C,A		●	●	●	●	●	
17.	Throttle play	C,A		●	●	●	●	●	
18.	Rear brake pedal play	C,A		●	●	●	●	●	
19.	Brake lining or pad wear	C,R		●	●	●	●	●	
20.	Brake fluid level / top up front	C	1 Month	●	●	●	●	●	
21.	Brake fluid change	R						Every 10,000kms	
22.	Steering play	C,A		●	●	●	●	●	
23.	All fasteners tightness	C,T		●	●	●	●	●	
24.	Engine mounting silent blocks	R						Every 20,000kms	
25.	Tyre tread wear	C,R			●	●	●	●	
26.	General lubrication	L		●	●	●	●	●	
27.	Steering stem bearing	L,R	1 year					Every 10000kms	
28.	Wheel bearing	C,L	1 year					Every 10000kms	
29.	Master cylinder cup and Dust seal	R						Every 2 years	
30.	Caliper piston seal and Dust seal	R						Every 2 years	

- : Indicates operation to be performed.
- ★ : More frequent cleaning may be required when driving in dusty condition & if the warning sign on speedo console starts flashing.
- : More frequent adjustment may be required if riding conditions are severe.

A - Adjust  
 CL - Clean  
 C - Check  
 L - Lubricate  
 T - Tighten  
 R - Replace

Note:  
 Parts/Lubricants to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.

## Periodic Maintenance & Lubrication Chart

Sr. No.	Operation		Which ever comes first		RECOMMENDED FREQUENCY				
			OR	Kms.	Initial				Subsequent
					Days	750	2,500	5,000	
				30-45	105-120	195-210	285-300		
31.	Swing arm pivot pin	L				●			Every 5000kms.
32.	Front fork	C,L		●		●		●	
33.	Front fork oil	R							Every 10000kms
34.	Front brake hose	C,R	2 years						
35.	Drive chain	L							Every 500 kms.
36.	Drive chain slack ■	A		●					Every 1000 kms.
37.	Drive chain wear / Remove & Lubricate	C,R				●			Every 5000kms.
38.	Engine compression pressure	C							Every 10000kms
39.	Cylinder head de-carbonising & valve lapping	CL							Every 30000kms
40.	Valve oil seals	R							Every 30000kms
41.	Lubrication of gear starter clutch	L							Every 500 kms.

- : Indicates operation to be performed.
- ★ : More frequent cleaning may be required when driving in dusty condition & if the warning sign on speedo console starts flashing.
- : More frequent adjustment may be required if riding conditions are severe.

A - Adjust  
CL - Clean  
C - Check  
L - Lubricate  
T - Tighten  
R - Replace

Note:  
Parts/Lubricants to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.