

Periodic Maintenance & Lubrication Chart

Sr. No.	Operation		Which ever comes first		RECOMMENDED FREQUENCY				
			OR	Kms.	Initial				Subsequent
					Days	750	2,500	5,000	7,500
			30	90	150	225	Every 75 days		
1.	Servicing			●	●	●	●	●	
2.	Valve clearance	A				●		Every 5000 kms	
3.	Engine oil (SAE 20W40 of API SG +JASO MA)	R		●		●		Every 5000 kms	
4.	Oil strainer	CL		●				Every 10000 kms	
5.	Air cleaner element †	CL		●	●	●	●	●	
6.	Air cleaner element	R						Every 10000 kms	
7.	Carburettor / Idle speed / CO%	CL,A		●	●	●	●	●	
8.	LPG idle speed / CO	C,A		●	●	●	●	●	
9.	LPG leakage	C,A,R		●		●		Every one year	
10.	Petrol system leakages	C,R		●	●	●	●	●	
11.	Fuel pipes (rubber type)	R						Every 20000 kms	
12.	Spark plug / gap	CL,A		●	●	●	●	●	
13.	Spark plug	R						Every 10000 kms	
14.	Brake light switch	C,A		●	●	●	●	●	
15.	Clutch play	C,A		●	●	●	●	●	
16.	Throttle play	C,A		●	●	●	●	●	
17.	T.P.S. adjustment & proper functioning	C, A		●	●	●	●	●	
18.	Front brake lever play	C,A		●	●	●	●	●	
19.	Rear brake pedal play	C,A		●	●	●	●	●	
20.	Steering play	C,A,R		●	●	●	●	●	
21.	All fasteners tightness including engine mounting	T		●	●	●	●	●	
22.	Tyre tread wear	C			●	●	●	●	
23.	Wheel rim out	C,A		●	●	●	●	●	
24.	General lubrication	L		●	●	●	●	●	
25.	Steering stem bearing	L	1 Year					Every 10000 kms.	
26.	Wheel bearing	L	1 Year					Every 10000 kms.	
27.	Swing arm mounting bush	L,R		L - Every 5000 kms. R - Every 20000 kms.					
28.	Front fork	C		●		●		Every 5000 kms	
29.	Front fork oil	R						Every 10000 kms.	
30.	Rear shock absorber	C,A		●	●	●	●	●	
31.	Front Brake Cable	C,R	1 Year						
32.	Drive chain wear / Remove and Lubricate	C,L				●		Every 5000 kms	
33.	Engine compression pressure	C						Every 10000 kms.	
34.	Valve lapping	C,R						Every 30000kms.	
35.	Valve oil seal	R						Every 30000kms.	
36.	Damper -LPR mounting	C,R						Once in year	

Periodic Maintenance & Lubrication Chart

Sr. No.	Operation		→ Whichever comes first ↓		RECOMMENDED FREQUENCY				
			OR	Kms.	750	2,500	5,000	7,500	Subsequent
				Days	30	90	150	225	Every 2,500km Every 75 days
37.	LPR Breather tube	C,R						Once in year	
38.	Carburettor breather tube	C,R						Once in year	
39.	Filter on carburettor breather	C,R		●	●	●	●		
40.	Filter on inlet MFV	R						Every one year	
41.	Filter on outlet MFV	R						Every one year	
42.	Filter on LPR	CL,R						Every one year	
43.	Solenoid on MFV	CL						Every one year	
44.	Solenoid on LPR	CL						Every one year	
45.	Petrol solenoid	CL						Every one year	
46.	LPG tank	C, CL						Every five year	
47.	Multifunction valve	CL,C						Every five year	
48.	LPG mixer	CL						Every 20,000 km.	
49.	LPG regulator	CL						Every five year	
50.	LPG diaphragm	R						Every five year	

A - Adjust L - Lubricate

CL - Clean T - Tighten

C - Check R - Replace

Note:

Parts / Lubricants to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.