

## Periodic Maintenance & Lubrication Chart

Sr. No.	Operation		OR	Kms. Days	RECOMMENDED FREQUENCY				
					Initial				Subsequent
					750	2,500	5,000	7,500	Every 2,500kms
					30-45	105-120	195-210	285-300	Every 90 days
1.	Servicing				●	●	●	●	●
2.	Idle speed / CO%	C,A			●	●	●	●	●
3.	Valve tappet clearance	A					●		Every 5000 kms
4.	Engine oil (SAE 20W50 of API SJ+JASO MA)	R			●		●		Every 5000 kms
5.	Oil strainer / Centrifugal filter	CL							Every 10000 kms
6.	Air cleaner element 	CL			●	●	●	●	●
7.	Air cleaner element	R							Every 10000 kms
8.	Fuel Injector	C							Every 10000 kms
9.	Fuel system leakages	C,R			●	●	●	●	●
10.	Fuel pipes	R							Every Year
11.	Spark plug / gap	CL,A			●	●	●	●	●
12.	Spark plugs (2 Nos.)	R							Every 10000 kms
13.	Battery electrolyte level	C,A			●	●	●	●	Every Year
14.	Brake light switch	C,A			●	●	●	●	●
15.	Oil cooler pipes	C,R			●	●	●	●	●
16.	High pressure fuel filter	C,R			●	●	●	●	●
17.	Clutch play	C,A			●	●	●	●	●
18.	Throttle play	C,A			●	●	●	●	●
19.	Rear brake pedal play	C,A			●	●	●	●	●
20.	Brake lining or pad wear	C,R			●	●	●	●	●
21.	Brake fluid level / top up front / rear	C	1 Month		●	●	●	●	●
22.	Brake fluid change	R							Every 10,000kms
23.	Steering play	C,A			●	●	●	●	●
24.	All fasteners tightness	C,T			●	●	●	●	●
25.	Engine mounting silent blocks	R							Every 20,000kms
26.	Tyre tread wear	C,R				●	●	●	●
27.	General lubrication	L			●	●	●	●	●
28.	Steering stem bearing	L,R	1 year						Every 10000kms
29.	Wheel bearing	C,L	1 year						Every 10000kms
30.	Master cylinder cup and Dust seal	R							Every 2 years

● : Indicates operation to be performed.

★ : More frequent cleaning may be required when driving in dusty condition & if the warning sign on speedo console starts flashing.

■ : More frequent adjustment may be required if riding conditions are severe.

A - Adjust

CL - Clean

C - Check

L - Lubricate

T - Tighten

R - Replace

**Note:**

Parts/Lubricants to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.



## Periodic Maintenance & Lubrication Chart

Sr. No.	Operation		↔ Whichever comes first ↓		RECOMMENDED FREQUENCY				
			OR	Kms.	Initial				Subsequent
				Days	750	2,500	5,000	7,500	Every 2,500km
			30-45	105-120	195-210	285-300	Every 90 days		
31.	Caliper piston seal and Dust seal	R						Every 2 years	
32.	Swing arm pivot pin	L			●			Every 5000kms.	
33.	Front fork	C,L		●		●		●	
34.	Front fork oil	R						Every 10000kms	
35.	Front brake hose/ Rear brake hose	C,R	2 years						
36.	Check gas pressure 7.0 + 0.5 Kg/cm <sup>2</sup>	C,R						Every 10000kms	
37.	Drive chain	L			Every 500 kms.				
38.	Drive chain slack ■	A		●					
39.	Drive chain wear / Remove & Lubricate	C,R				●		Every 5000kms.	
40.	Engine compression pressure	C						Every 10000kms	
41.	Cylinder head de-carbonising & valve lapping	CL						Every 30000kms	
42.	Valve oil seals	R						Every 30000kms	
43.	Rear brake hose	C,R						Every 2 years	
44.	Lubrication of gear starter clutch	L			Every 500 kms.				

- : Indicates operation to be performed.
- ★ : More frequent cleaning may be required when driving in dusty condition & if the warning sign on speedo console starts flashing.
- : More frequent adjustment may be required if riding conditions are severe.

- A - Adjust
- CL - Clean
- C - Check
- L - Lubricate
- T - Tighten
- R - Replace

Note:  
Parts/Lubricants to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.