

Periodic Maintenance & Lubrication Chart

Sr. No.	Operation	→ Whichever comes first ↓		RECOMMENDED FREQUENCY				
				Initial				Subsequent
		OR	Kms.	500-750	2,500	5,000	7,500	Every 2,500km
	Days	30 - 45	240 days from date of sale			Every 75 days		
1.	Servicing		✓	✓	✓	✓	✓	
2.	Engine Idling speed / CO%		C,A	C,A	C,A	C,A	Check & Adjust	
3.	Valve tappet clearance		C,A		C,A		Every 5,000 kms	
4.	Engine oil		R		R		Every 5,000 kms	
5.	Oil strainer / Centrifugal Filter		CL		CL		Every 5,000 kms	
6.	Engine oil Filter (Paper Oil Filter)		R		R		Every 5,000 Kms	
7.	Spark Plug functioning/Gap/Replacement (2 Nos)		C,A	C,A	C,A	C,A	R - Every 15000 Kms	
8.	Air cleaner element H		CL	CL	CL	CL	R - Every 15,000 Kms	
9.	Air filter Cover 'O' Ring						R - Every 25,000 Kms	
10.	Carburettor Overhaul & Adjustment		C, A	C, A	C, A	C, A	CL - Every 10,000 Kms	
11.	Carburettor Rubber Duct						R - Every 10,000 Kms	
12.	Fuel pipes		C,CL	C,CL	C,CL	C,CL	R - Every 20,000 kms	
13.	Battery electrolyte level		C,A	C,A	C,A	C,A	Every 2,500 Kms	
14.	Clutch Lever free play		C,A	C,A	C,A	C,A	Every 2,500 Kms	
15.	Throttle Grip play		C,A	C,A	C,A	C,A	Every 2,500 Kms	
16.	Rear brake pedal free play		C,A	C,A	C,A	C,A	Every 2,500 Kms	
17.	Brake lining or pad wear		C	C	C	C	R - Every 10,000 Kms	
18.	Brake Fluid level top -up / Replace		C	C	C	C	R - Every 10,000 kms or 1 Year	
19.	Brake cam & pedal pivot pin						L- Every 15,000 Kms	
20.	Steering play		C,A	C,A	C,A	C,A	Every 2,500 Kms	
21.	Steering stem bearing						L - Every 10,000 Kms R - If required	
22.	All fasteners tightness		C,T	C,T	C,T	C,T	C,T - Every 2,500 Kms	
23.	Rear sprocket fasteners						T - Every 10,000 Kms	
24.	Silencer drain hole cleaning		CL	CL	CL	CL	CL - Every 2,500 Kms	
25.	Cylinder head de-carbonising, valve lapping & Replace Valve oil Seals						Every 30,000 Kms	
26.	Engine air breather tube		C	C	C	C	R - Every 1 Year	
27.	Drive chain lubrication & slackness adjustment		C,A,L	C,A,L	C,A,L	C,A,L	L - Every 500 Kms & Adjust slack every 2500 Kms	
28.	Drive Chain remove, clean, inspect & lubricate				✓		Every 5,000 kms	
29.	Drive Chain Link Lock				R		R - Every 5,000 kms	
30.	Rear wheel rubber shock damper						R - Every 10,000 kms or 1 Year	

Periodic Maintenance & Lubrication Chart

Sr. No.	Operation	→ Whichever comes first ↓		RECOMMENDED FREQUENCY				
				Initial				Subsequent
		OR	Kms.	500-750	2,500	5,000	7,500	Every 2,500km
	Days	30 - 45	240 days from date of sale			Every 75 days		
31.	Wheel bearing (for non sealed bearings only)						L - Every 10,000 Kms	
32.	Tyre tread wear (replace if worn out till TWI limit)			C	C	C	C - Every 2,500 Kms	
33.	Master cylinder cup and Dust seal						R - Every 2 Years	
34.	Brake Hose Pipe						R - Every 2 Years	
35.	Caliper Piston seal & dust seal						R - Every 2 Years	
36.	Front fork oil						R - Every 10,000 Kms	
37.	TPS, Thermal Sensor & Auto Choke Functioning		C,A	C,A	C,A	C,A	C,A - Every 2,500 Kms	
38.	Rr. Shock Absorber- Check gas pressure						C,A - Every 10,000Kms	
39.	Starter Clutch bush kit						CL,R -Every 15,000Kms	
40.	Clutch switch cleaning						CL - Every 10,000 Kms	
41.	General lubrication		L	L	L	L	L - Every 2,500 Kms	
42.	Swing arm pivot pin Lubrication						L - Every 15,000 Kms	
43.	Fuel cock sediment bowl				CL		CL - Every 5000 Kms	

● : Indicates operation to be performed.

★ : More frequent cleaning may be required when driving in dusty condition.

A - Adjust • C - Check • CL - Clean • L - Lubricate • T - Tighten • R - Replace

Note :

Parts / Lubricants to be replaced as per Periodic Maintenance & Lubrication Chart are mandatory and the same are chargeable to customer.

Engine Oil Specification

Recommended Grade	SAE 20W40 of API 'SJ' + JASO 'MA' OR SAE 20W40 of API 'SL' + JASO 'MA'
Recommended Quantity	Drain & Refill : 1000 ml (1 Liter) Engine Overhaul : 1100 ml (1.1 Liter)