

Sr. No.	Operation	RECOMMENDED FREQUENCY								
		Servicing	1st	2nd	3rd	4th	5th	6th	7th	
		Kms	750	5000	10000	15000	20000	25000	30000	
1.	Servicing		✓	✓	✓	✓	✓	✓	✓	1st - 750 Kms / 30 Days 2nd onward @5000 Kms
2.	Engine idling speed / CO%	A	A	A	A	A	A	A	A	
3.	Valve tappet clearance	A	A	A	A	A	A	A	A	
4.	Engine oil* - Bajaj DTS-i 10000	R	R		R		R		R	Replace at 10000 Kms*
5.	Oil strainer / Centrifugal filter	CL	CL		CL		CL		CL	Clean at 10000 Kms
6.	Spark plug functioning / Gap (if applicable)	C, A, R	C, A	C, A	C, A	R	C, A	C, A	R	Replace at every 15000 Kms
7.	Air cleaner element Clean / Replace**	CL, R	CL	CL	CL	R	CL	CL	R	Clean at every 5000 Kms Replace at every 15000 Kms
8.	Air filter cover 'O' Ring	R					R			Replace at every 20000 Kms
9.	Fuel cock sediment bowl cleaning	CL		CL	CL	CL	CL	CL	CL	
10.	Carburettor float bowl cleaning	CL			CL		CL		CL	Clean at every 10000 Kms
11.	Carburettor rubber duct	C, R	C	C	C	C	R	C	C	Replace at every 20000 kms
12.	Fuel pipes	C, R	C	C	C	C	R	C	C	Replace at every 20000 kms
13.	Battery electrolyte level	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
14.	Clutch lever free play	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
15.	Throttle grip play	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
16.	Rear brake pedal free play	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
17.	Brake lining or pad wear	CL, R		CL	CL	CL, R	CL	CL	CL, R	Replace at every 15000 kms
18.	Brake fluid level / Top up / Replace (If applicable)	C, A, R	C, A	C, A	C, A	C, A	C, A	C, A	R	Replace at every 30000 kms
19.	Master cylinder cup and dust seal (If applicable)	R							R	Replace at every 30000 kms
20.	Caliper piston seal and dust seal (If applicable)	R							R	Replace at every 30000 kms
21.	Brake hose pipe (If applicable)	C, R							C, R	Replace at every 30000 kms
22.	Brake cam & pedal pivot pin	L				L			L	
23.	Steering play	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	
24.	Steering stem bearing	C, L, R			C,L,R		C,L,R		C,L,R	
25.	All fasteners tightness	C, T	C, T	C, T	C, T	C, T	C, T	C, T	C, T	
26.	Rear sprocket fasteners	C, T	C, T	C, T	C, T	C, T	C, T	C, T	C, T	
27.	Rear wheel rubber shock damper	C, R			C, R		C, R		C, R	Replace at every 10000 kms
28.	Silencer drain hole cleaning	CL	CL	CL	CL	CL	CL	CL	CL	Clean at every 5000 Kms
29.	Cylinder head de-carbonising, valve lapping & Replace valve oil seals	CL				CL			CL	Clean at every 15000 Kms
30.	Engine air breather tube	R					R			Replace at every 20000 Kms
31.	Drive chain slackness adjustment & lubrication	C, A, L	C,A,L	C,A,L	C,A,L	C,A,L	C,A,L	C,A,L	C,A,L	Lubricate at every 500 kms. A- slackness whenever reqd.
32.	Drive chain remove, clean, insp. & lubricate (O/H)	CL, L			CL, L		CL, L		CL, L	At every 10000 Kms
33.	Drive chain link lock	R			R		R		R	Replace at every 10000 Kms
34.	Drive chain 'O' ring type (if applicable)	L	L	L	L	L	L	L	L	At every 500 Kms

Sr. No.	Operation	Servicing Kms	RECOMMENDED FREQUENCY								
			1st	2nd	3rd	4th	5th	6th	7th		
			750	5000	10000	15000	20000	25000	30000		
35.	Wheel bearing (for non sealed bearings only)	C, L						C, L			At every 20000 Kms
36.	Tyre tread wear (replace if worn out till TWI limit)	C, R			C, R	C, R	C, R	C, R	C, R	C, R	At every 5000 kms i.e. at every service after 2nd service
37.	Front fork oil	R						R			Replace at every 20000 Kms
38.	Thermal sensor & Auto choke functioning (If applicable)	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	At every 5000 Kms
39.	TPS (If applicable)	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	C, A	At every 5000 Kms
40.	Rear shock absorber- Check gas pressure (If applicable)	C, A						C, A			At every 20000 Kms.
41.	Starter clutch bush kit for dry type	CL, R					CL, R			CL, R	
42.	Clutch switch cleaning	CL			CL			CL		CL	
43.	General lubrication	L	L	L	L	L	L	L	L	L	
44.	Swing arm bush greasing through grease nipple	L	L	L	L	L	L	L	L	L	Lubricate at every 5000 Kms
45.	Engine foundation silent bush	R					R			R	Replace at every 15000 Kms
46.	Lubrication of gear starter clutch	L		L	L	L	L	L	L	L	Lubricate at every 5,000 Kms
47.	Clutch, Accelerator cable	R									Replace at every two years

★★ :More frequent cleaning may be required when driving in dusty condition.

A - Adjust • C - Check • CL - Clean • L - Lubricate • T - Tighten • R - Replace

Note :

Parts / Lubricants to be replaced as per Periodic Maintenance & Lubrication Chart are mandatory and the same are chargeable to customer.

★ **Recommended Oil :**

"Bajaj DTS-i 10000" a high performance engine oil developed by Bajaj auto..

Bajaj Auto recommends "Bajaj DTS-i 10000" engine oil for 10,000 kms drain interval, better performance of engine components & warranty benefits.



Bajaj DTS-i 10000	SAE 20W50 of API 'SL', JASO MA Grade.
Replacement Frequency*	1st replacement at 750 Kms. / 1st service. Thereafter at every 10,000 Kms.
Recommended Quantity	Drain & Refill 1150 ml., Engine Overhaul 1300 ml.
*For any other branded oil of equivalent grade replacement frequency will be 5000 Kms.	

⚠ **CAUTION :**

- It is most important to adhere to recommended grade & frequency of oil change for the purpose of long life of critical engine components.
- Do not reuse drained oil.