

# Periodic Maintenance & Lubrication Chart

Sr. No.	Operation	Service	RECOMMENDED FREQUENCY							Remarks
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
			500 ~ 750	4500 ~ 5000	9500 ~ 10000	5000 Km after Previous Service				
1.	Clean the vehicle with water wash & dry completely		✓	✓	✓	✓	✓	✓	✓	Ensure to prevent water entry in petrol tank, silencer & electrical parts. Use caustic free detergent for washing.
2.	*Engine oil (Bajaj DTSi 10000 oil)	C,R	<input type="checkbox"/> R	Top-up	<input type="checkbox"/> R	Top-up	<input type="checkbox"/> R	Top-up	<input type="checkbox"/> R	BGO DTSi 20W50
3.	Engine oil filter		<input type="checkbox"/> R		<input type="checkbox"/> R		<input type="checkbox"/> R		<input type="checkbox"/> R	
4.	Oil strainer	CL	CL		CL		CL		CL	Oil strainer cleaning at the time of oil change.
5.	Spark plug	CL,C,A					CL,A			C&A at 20,000 Kms. Replace after 40,000 Kms
6.	Air cleaner element	R					R			Replace after every 20,000 kms. Cleaning not required.
7.	In line fuel filter	R					R			Replace after every 20,000 Kms.
8.	Fuel pipe	C,R					C,R			Replace if required.

✓ Tick in the box  after replacing the periodic parts.

# Periodic Maintenance & Lubrication Chart

Sr. No.	Operation	Service	RECOMMENDED FREQUENCY							Remarks
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
			500 ~ 750	4500 ~ 5000	9500 ~ 10000	5000 Km after Previous Service				
9.	Valve tappet clearance	C, A					C, A			Check & adjust at every 20,000 kms.
10.	Sealed drive chain cleaning & lubrication	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	Customer to apply OKS chain lub spray at every 500 Kms.
11.	Air filter drain tube	CL					CL			Clean at every 20000 kms.
12.	Silencer drain hole cleaning	CL		CL	CL	CL	CL	CL	CL	
13.	End chamber tail pipe cleaning	CL		CL	CL	CL	CL	CL	CL	End chamber to be cleaned using brush.
14.	Brake pedal pivot pin	C,L,R	C	C,L,R	C,L,R	C,L,R	C,L,R	C,L,R	C,L,R	Use recommended AP grease.
15.	Brake lining or pad - Check wear indicator	C,R	C,R	C,R	C,R	<input type="checkbox"/>	C,R	C,R	<input type="checkbox"/>	Replace brake shoes/pad at every 15000 Kms.
16.	Brake fluid level - top up / replace	C,A,R				C,A			<input type="checkbox"/>	Use recommended brake fluid (DOT4)
17.	Disc brake assly -- Check functionality, leakage or any other damage.	C			C		C		C	

✓ Tick in the box  after replacing the periodic parts.

# Periodic Maintenance & Lubrication Chart

Sr. No.	Operation	Service	RECOMMENDED FREQUENCY							Remarks
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
			500 750	4500 5000	9500 10000	5000 Km after Previous Service				
18.	All cables & rear brake pedal free play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
19.	Wiring harness & Battery connections- routing, tie bands & clamps tightness.	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	
20.	Steering play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
21.	Ignition switch barrel cleaning & handle bar control switches contacts cleaning.	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	Use recommended WD40 spray
22.	Steering stem bearing & Cap steering bearing (Plastic)	C,CL, L,R			C,CL, L,R		C,CL, L,R		C,CL, L,R	Check & replace if damaged. Use HP Lithon RR3 grease for lubrication.
23.	Side stand pin	CL,L			CL,L		CL,L		CL,L	Use recommended AP grease.
24.	All fasteners tightness	C,T	C,T	C,T	C,T	C,T	C,T	C,T	C,T	
25.	General lubrication-Clutch lever, front brake lever	L	L	L	L	L	L	L	L	Use recommended AP grease.
26.	Coolant level in expansion tank	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	Use recommended 'Ready to use coolant'.

## Periodic Maintenance & Lubrication Chart

Sr. No.	Operation	Service	RECOMMENDED FREQUENCY							Remarks
			1st	2nd	3rd	4th	5th	6th	7th	
			Kms	Kms	Kms	Kms	Kms	Kms	Kms	
27.	Coolant hose damage/clamps/leakage	C		C	C	C	C	C	C	
28.	Radiator fins	C		C	C	C	C	C	C	

\* It is strongly recommended to use only Bajaj genuine oil, In case of any other engine oil of same specifications is used the frequency would be every 5000 kms.

C: Check, A: Adjust, CL: Clean, R: Replace, T: Tighten, L: Lubricate

Following items are chargeable to Customer.

Oil, Coolant, Filters, All types of greases, Cleaning agents, Cables, Wear & tear parts, Rubber O rings/oil seals/pipes, Gaskets etc.