

Periodic Maintenance & Lubrication Chart



| Sr. No. | Operation | Servicing | RECOMMENDED FREQUENCY | | | | | | Subsequent | | |
|---------|---|-----------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|--|--|
| | | | Kms | 1 st Free | 2 nd Free | 3 rd Free | Every | | | | |
| | | | | 500 750 | 4500 5000 | 9500 10000 | 5000 Km after Previous Service | | | | |
| 1. | Water wash & dry the vehicle completely | | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Ensure to prevent water entry in Petrol tank, Silencer & electrical Parts. Use caustic free detergent for washing. | |
| 2. | Engine oil (Bajaj DTSi 10000 oil) | C,R | <input type="checkbox"/> R | Top Up | <input type="checkbox"/> R | Top Up | <input type="checkbox"/> R | Top Up | <input type="checkbox"/> R | BGO DTSi 10W30 for 100cc models. BGO DTSi 20W50 for Models above 125cc. | |
| 3. | Engine oil filter | C,R | <input type="checkbox"/> R | | <input type="checkbox"/> R | | <input type="checkbox"/> R | | <input type="checkbox"/> R | | |
| 4. | Oil strainer | CL | CL | | CL | | CL | | CL | | |
| 5. | Body centrifugal filter** | CL | CL | | | | CL | | CL | | |
| 6. | Starter Clutch (Dry Type)** | L | | L | L | L | L | L | L | Use recommended Molycote grease. | |
| 7. | Spark plug | CL,A,R | | | | CL,A | | | <input type="checkbox"/> R | | |
| 8. | Air cleaner element *** | CL,R | | | | <input type="checkbox"/> R | | | <input type="checkbox"/> R | | |

✓ Tick in the box after replacing the periodic parts.

Periodic Maintenance & Lubrication Chart



| Sr. No. | Operation | Servicing Kms | RECOMMENDED FREQUENCY | | | | | | Subsequent | |
|---------|---|------------------|-----------------------|----------------------|----------------------|--|--------|--------|----------------------------|---|
| | | | 1 st Free | 2 nd Free | 3 rd Free | Every 5000 Km after Previous Service | | | | |
| | | | 500 750 | 4500 5000 | 9500 10000 | | | | | |
| 9. | Air filter cover 'O' ring | CL,R | | | | <input type="checkbox"/> R | | | <input type="checkbox"/> R | |
| 10. | In line paper filter | R | | | | <input type="checkbox"/> R | | | <input type="checkbox"/> R | |
| 11. | Fuel cock paper filter. | R | | | | <input type="checkbox"/> R | | | <input type="checkbox"/> R | |
| 12. | Fuel cock sediment bowl cleaning | CL | | | | CL | | | CL | |
| 13. | Carburettor rubber duct | C,R | | | | | C,R | | | Replace if required. |
| 14. | Fuel pipe | C,R | C | C | C | <input type="checkbox"/> R | C | C | <input type="checkbox"/> R | |
| 15. | Valve tappet clearance | C,A | | | | C,A | | | C,A | |
| 16. | Non-Sealed drive chain cleaning & lubrication | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | |
| 17. | Sealed drive chain cleaning & lubrication | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | CL,L,A | Customer to apply OKS chain lub spray at every 500 kms. |
| 18. | Engine air breather tube | C,R | | | | C,R | | | C,R | Replace if required. |
| 19. | Silencer drain hole cleaning | CL | | CL | CL | CL | CL | CL | CL | |

✓ Tick in the box after replacing the periodic parts.

Periodic Maintenance & Lubrication Chart



| Sr. No. | Operation | Servicing | RECOMMENDED FREQUENCY | | | | | | | Subsequent |
|---------|---|-----------|-----------------------|----------------------|----------------------|-----------------------------------|-------|-------|--------------------------|---|
| | | | 1 st Free | 2 nd Free | 3 rd Free | Every | | | | |
| | | | 500 750 | 4500 5000 | 9500 10000 | 5000 Km after Previous Service | | | | |
| 20. | Silencer tail pipe cleaning** | CL | | CL | CL | CL | CL | CL | CL | |
| 21. | Brake cam & brake pedal pivot pin | C,L,R | C | C,L,R | C,L,R | C,L,R | C,L,R | C,L,R | C,L,R | Use AP grease. |
| 22. | Brake lining or pad - Check wear indicator | | C,R | C,R | C,R | <input type="checkbox"/> | C,R | C,R | <input type="checkbox"/> | |
| 23. | Brake fluid level **- top up / replace | C,A,R | | | | C,A | | | <input type="checkbox"/> | Use recommended brake fluid (DOT3/DOT4) |
| 24. | Disc brake assly -- Check functionality, leakage or any other damage. | C | | | C | | C | | C | |
| 25. | All cables & rear brake pedal-free play | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |
| 26. | Battery electrolyte level, specific gravity | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | Not applicable for VRLA battery |
| 27. | Wiring harness & Battery connections- routing, tie bands & clamps tightness. | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | C,A,T | |
| 28. | Ignition switch barrel cleaning | C,CL | C,CL | C,CL | C,CL | C,CL | C,CL | C,CL | C,CL | Use WD40 spray |

✓ Tick in the box after replacing the periodic parts.

Periodic Maintenance & Lubrication Chart



| Sr. No. | Operation | Servicing | RECOMMENDED FREQUENCY | | | | | | | Subsequent |
|---------|--|-----------|-----------------------|----------------------|----------------------|-----------------------------------|--------------|------|--------------|---|
| | | | 1 st Free | 2 nd Free | 3 rd Free | Every | | | | |
| | | | 500 750 | 4500 5000 | 9500 10000 | 5000 Km after Previous Service | | | | |
| 29. | Handle bar control switches contacts cleaning | C,CL | C,CL | C,CL | C,CL | C,CL | C,CL | C,CL | C,CL | Use WD40 spray |
| 30. | Steering play | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |
| 31. | Steering stem bearing*** & Cap steering bearing (Plastic)** | C,CL,L,R | | | C,CL, L,R | | C,CL, L,R | | C,CL, L,R | Check & replace if Damaged. Use HP Lithon RR3 grease for lubrication. |
| 32. | Main stand & side stand pin** | CL,L | | | CL,L | | CL,L | | CL,L | Use AP grease. |
| 33. | Swing arm pivot pin (for non silent bush)** | L | | L | L | L | L | L | L | |
| 34. | All fasteners tightness | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | |
| 35. | Engine foundation silent bushes** | C | | | | C | | | C | |
| 36. | General lubrication-Clutch lever, front brake lever, kick lever. | L | L | L | L | L | L | L | L | Use AP grease. |
| 37. | Idle speed / CO% | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | |

✓ Tick in the box after replacing the periodic parts.

Periodic Maintenance & Lubrication Chart



| Sr. No. | Operation | Servicing Kms | RECOMMENDED FREQUENCY | | | | | | | Subsequent |
|---------|--------------------------------------|------------------|-----------------------|----------------------|----------------------|--|-----|-----|-----|---|
| | | | 1 st Free | 2 nd Free | 3 rd Free | Every 5000 Km after Previous Service | | | | |
| | | | 500 750 | 4500 5000 | 9500 10000 | | | | | |
| 38. | Coolant level in expansion tank** | C,A | C,A | C,A | C,A | C,A | C,A | C,A | C,A | Use recommended 'Ready to use coolant'. |
| 39. | Coolant hose damage/clamps/leakage** | C | | C | C | C | C | C | C | |
| 40. | Radiator fins** | C | | C | C | C | C | C | C | |
| 41. | Spoke tightening**-Front & Rear | C,T | C,T | C,T | C,T | C,T | C,T | C,T | C,T | |

✓ Tick in the box after replacing the periodic parts.

** As applicable to model

*** More frequent cleaning may be required while driving in dusty environment.

C : Check, A : Adjust, CL : Clean, R : Replace, T : Tighten, L : Lubricate

Note : Periodic parts, Oil, Coolant, Filters, All types of greases, Cleaning agents, Cables, Wear & tear parts, Rubber 'O' rings / oil seals / pipes, Gaskets to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.