

# OWNER'S MANUAL



THE WORLD'S  
FAVOURITE  
INDIAN

*pulsar*  
**NS160**



REV. 07, APR 19

## Foreword

### Welcome to the Pulsar family!

You are now the proud owner of the next generation **Pulsar NS160**, India's No.1 sports bike. By No.1 we are talking about unparalleled performance, superior technology and incredible market leadership that Pulsar today enjoys. This makes the Pulsar you ride, unbeatable and unchallenged both on and off the road.

Before you ride out, please read this Owner's Manual carefully and familiarize yourself with the operating mechanism, controls and maintenance requirements of your Pulsar. This will ensure you a safe and trouble free ownership experience.

To keep your bike in perfect running condition and deliver consistent performance, we have specially programmed the periodic maintenance services which includes 3 free services and subsequent paid services, as per the schedule contained in this booklet. We earnestly advise you to avail all these services at any of our Bajaj Dealers or Authorised Service Dealers (ASD) who are well equipped with all necessary facilities / genuine parts / oil and trained manpower to ensure the best care for your Pulsar. Your '**Pulsar NS160**' comes with a warranty of **5 Years or 75,000 Kms** whichever occurs earlier from the date of sale. For details please refer to "Warranty : Scope & Limits" given in this manual.



**pulsar**  
**NS160**

Should you require any additional information feel free to contact us on helpline numbers

or e-mail us at: [customerservice@bajajauto.co.in](mailto:customerservice@bajajauto.co.in)

or visit the Bajaj Auto website **[www.bajajauto.com](http://www.bajajauto.com)**

To be a part of the Pulsarmania,

visit [www.mypulsar.com](http://www.mypulsar.com) and join the Pulsar fanpage on

facebook: **[www.facebook.com/mypulsar](https://www.facebook.com/mypulsar)**

Rev up, shift gears and enjoy the Pulsar experience...

### SERVICE DEPARTMENT

### BAJAJ AUTO LIMITED

## TABLE OF CONTENTS



**pulsar**  
**NS160**

### Description

1.	Technical Specifications	1	20.	Free Service Guidelines	29
2.	Identification Data	3	21.	Periodic Maintenance & Lubrication Chart	30
3.	Location of Parts	4	22.	Non Use Maintenance	35
4.	Steering cum Ignition lock	6	23.	Warranty Scope & Limit	36
5.	Fuel Tank Cap / Fuel Tap	7	24.	Delivery Certificate	
6.	Speedometer Details	8	25.	Battery Warranty Card	
7.	Speedometer Setting	10			
8.	Control Switches	12			
9.	Rear seat / Tool kit	14			
10.	Front Seat / Battery	15			
11.	Fitment of Front & Rear Seat	16			
12.	Daily Safety Checks	17			
13.	How to ride your Bike	18			
14.	Safe Riding Tips	22			
15.	Engine Oil	23			
16.	Wheels - Tubeless Tyre	24			
17.	Battery	25			
18.	Periodic Maintenance Information	26			
19.	Brake Fluid	28			

### Safety and Warning information :



**Warning :** This indicates that a potential hazard or injury to you or other persons & to the vehicle can happen if advice provided is not followed.



**Caution :** This indicates that a potential hazard that could result in vehicle damage. Follow the Advice provided with the caution.

**Notice:** The description and illustration in this booklet are not to be taken as binding on the manufacturers. The essential features of the type described and illustrated herein remaining unaltered. Bajaj Auto Limited reserves the right to carry out at any moment without being obliged to bring this booklet upto-date & to do modifications on the vehicle, parts or accessories as may be convenient and necessary.

## TECHNICAL SPECIFICATIONS



**pulsar**  
**NS160**

<b>Engine</b>	:	4 Stroke, DTSi
Bore x Stroke	:	58.0 mm x 60.7 mm
Engine Displacement	:	160.3 cc
Compression Ratio	:	9.8 + 0.5 : 1
Idling Speed	:	1400 + 100 RPM
Max. Net Power	:	15.5 PS at 8500 RPM
Max. Net Torque	:	14.6 Nm at 6500 RPM
Ignition System	:	DC
Spark Plug	:	2 Nos (Champion)
Spark Plug Gap	:	0.7 ~ 0.8 mm
Transmission	:	5 speed constant mesh
Gear Shifting Pattern	:	1 Down 4 Up
Engine Lubrication	:	Forced lubrication
Engine Cooling	:	Oil Cooled
Starting Aid	:	Electric starter / Kick
Front Brake	:	Hydraulic Disc type
Rear Brake	:	Hydraulic Disc type
<b>Fuel Tank Capacity</b>		
Full	:	12 liters
Usable Reserve	:	2.4 liters
Unusable Reserve	:	0.2 liters

### Dimensions :-

Length	:	2017 mm
Width	:	803.5 mm
Height	:	1060 mm
Wheel base	:	1370 mm
Ground clearance	:	170 mm

### Tyre Size :-

Front	:	80/100-17,46P tubeless
Rear	:	110/80-17,57P tubeless

### Tyre Pressure :-

Front	:	1.75 kgf/cm <sup>2</sup> (25 PSI)
Rear (Solo)	:	2.00 kgf/cm <sup>2</sup> (28 PSI)
Rear (with pillion)	:	2.25 kgf/cm <sup>2</sup> (32 PSI)

Electrical System	:	12 Volts DC
Head Lamp	:	55/60W
Position Lamp	:	3W (2 nos.)
Tail / Stop Lamp	:	LED type

## TECHNICAL SPECIFICATIONS



Side Indicator lamp	:	10W Amber (4 nos.)
Neutral Indicator	:	Green LED
Hi Beam Indicator	:	Blue LED
Turn Signal Indicator	:	Green LED
Side Stand Indicator	:	LCD
Speedometer Illumination	:	LCD Amber
Fuel Level Indicator	:	LCD Bar
Low Oil Pr. Indicator	:	LED-Red
Low Battery Indicator	:	LED-Red
Bajaj Logo	:	LED-Blue
Rear No. Plate Lamp	:	3W
Horn	:	12V DC
Battery	:	12V - 4 Ah VRLA
Vehicle Kerb Weight	:	148 kg.
Gross Vehicle Weight	:	278 kg.

### Note :

- All dimensions are under UNLADEN condition.
- Above information is subject to change without any notice.
- This vehicle complies to BS IV standards.
- AHO is government regulation.

**Single Channel ABS unit for Front brake is fitted on this vehicle.**

### ABS System Information:


- Always maintain a safe distance between you and objects ahead. Vehicle speeds should always be reduced during extreme road conditions. The braking distance for motorcycle equipped with an anti-lock braking system may be longer than for those without it on rough road conditions. During these conditions the vehicle should be driven at reduced speeds.
- When you apply Front brake under conditions which may lock the wheels, you feel a corresponding sensation (pulsation) in Front brake lever. This is normal and it means your ABS is active.
- Also it is recommended to use both front & rear brakes simultaneously.
- Always slow down when cornering. The anti-lock brake system cannot prevent accidents resulting from excessive speeds.

## IDENTIFICATION DATA



**pulsar**  
**NS160**

The Frame and Engine serial numbers are used to register the motorcycle. They are the unique alpha-numeric codes to identify your particular vehicle from others of the same model and type.

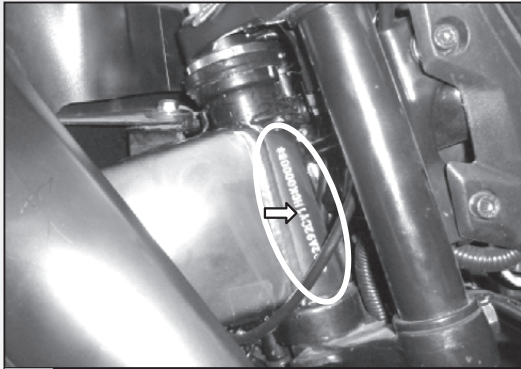


### Frame Number Location

On RH Side of Steering Tube  
(Alpha-Numeric - 17 Digits)

### Engine Number Location


On LH Side Crankcase Near Gear  
Change Lever (Alpha-Numeric - 11 Digits)

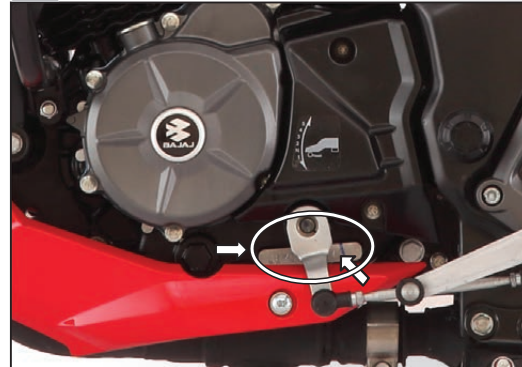

## LOCATION OF PARTS



**pulsar**  
**NS160**

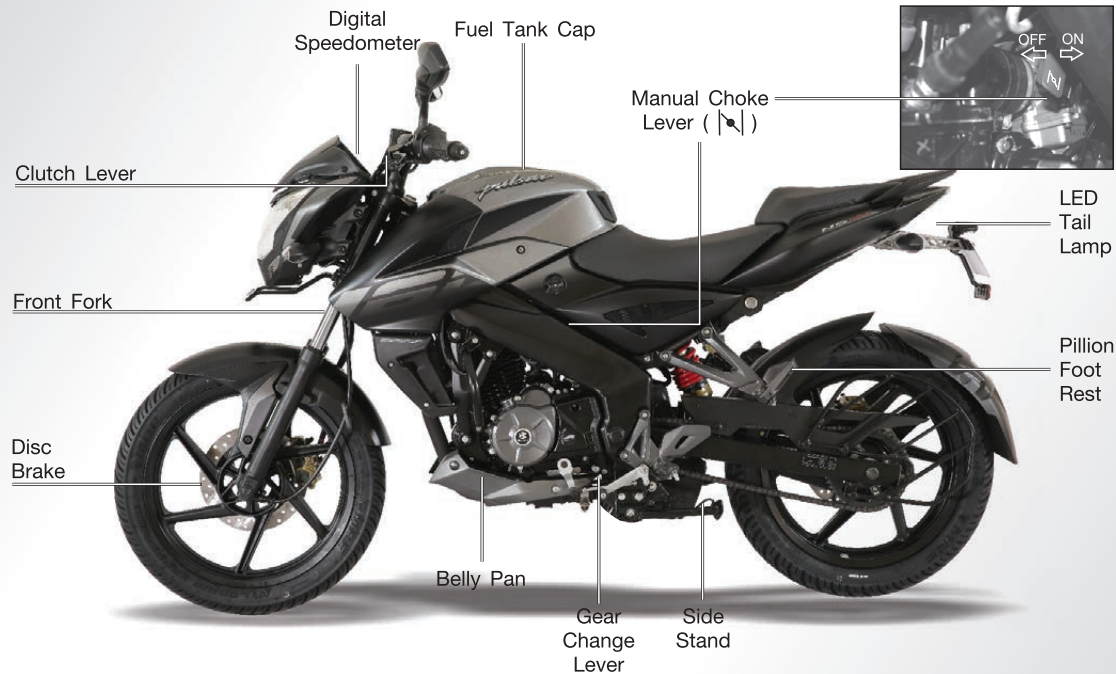

## LOCATION OF PARTS




**pulsar**  
**NS160**



## Steering cum Ignition Lock



**pulsar**  
**NS160**

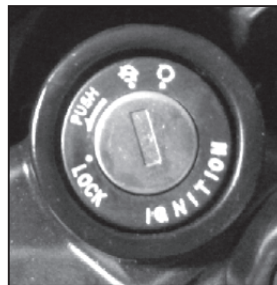

### Steering cum Ignition Lock :

It has three positions.

●	<b>LOCK:</b> Steering locked. Ignition OFF.
⊘	<b>OFF:</b> Steering unlock. Ignition OFF.
⊙	<b>ON:</b> Steering unlock. Ignition ON.

**To Lock the Steering :** To lock the steering, turn the handle bar to the left side. Inside the key & Push, Turn the key to "LOCK" position and remove the key. **Steering locking on handle position left hand side only.**

**To Unlock the Steering :** To unlock steering, insert the key in steering cum ignition lock & turn it clockwise to "OFF" or "ON" position.

**Key :** A common key is used for 'Steering cum Ignition lock', 'Fuel tank cap' & 'Rear Seat'.

## Fuel Tank Cap / Fuel Tap



**pulsar**  
**NS160**




### Fuel Tank Cap

- To open the fuel tank cap, open the flap. Insert the key in the lock and turn it clockwise and lift fuel tank cap.
- To lock the 'Fuel Tank Cap' insert the key in the lock and turn it clockwise and press fuel tank cap. 'Click' sound ensures cap is fully locked.



**Caution :** In case petrol is spilled out on white/light colour petrol tank, it is to be immediately cleaned with clean soft cotton cloth to prevent permanent stain marks on petrol tank.

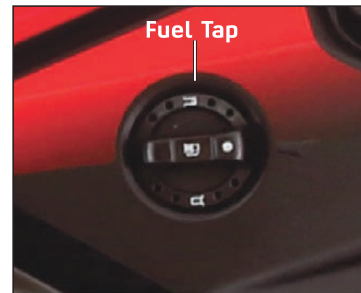

### Precaution :

Dont attach metallic 'Key chain' as it may damage paint of petrol tank cover.

### Fuel Tap


Fuel tap lever has following positions.

	ON : When fuel level is above reserve position.
	RES : When fuel level is below reserve position.
	OFF : When fuel supply is to be cut off.

## Speedometer Details



**pulsar**  
**NS160**

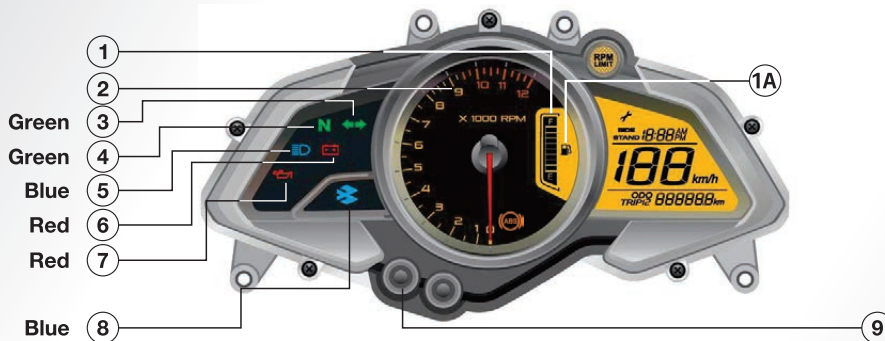

**1. Fuel Level Indicator:** It shows fuel level in fuel tank.


**1A Low Fuel Indicator**  : It blinks if fuel bar is  $\leq 1$ .

**2. Tachometer Dial:** It shows engine speed in RPM.

**3. Turn Signal Indicator (LH & RH):** When Turn signal switch is turned to Left or Right, Turn pilot Indicator - LH or RH will flash.

**4. Neutral Indicator:** When the transmission is in Neutral, Neutral indicator will glow.

**5. Hi Beam Indicator:** When Headlight is 'ON' & Hi beam is selected with engine running, Hi beam indicator will glow.

**6. Low Battery Indicator**  : It indicates battery needs charging.

**7. Low Oil Pressure Indicator**  : It glows when engine oil pressure is low.

**8. Bajaj Logo** : Bajaj logo flying 'B' continuously glow.

**9. Mode Button** : Mode button used for changing the mode, while selecting & setting Trip1, Trip2, ODO, Clock & Service reminder.

## Speedometer Details



**pulsar**  
**NS160**



**10. Engine Rev Indicator:** It blinks when engine RPM is between 10000 ~ 10500 RPM. Continuously ON at RPM more than 10500.

**11. Service Reminder ( wrench icon):** 'Wrench' symbol glows when ODO meter reading reaches to set Kms. for service. This Icon will flash at -

**1st : 450 km                      2nd : 4450 km,**

**3rd : 9450 km,                      4th : 14450 km**

and subsequently at each 5000 kms. Icon will continue to glow till it is reset. This icon is to be reset after service is carried out.

**12. Side Stand Indicator:** When Side stand is down, the Side stand indicator will glow.

**13. Digital Clock:** It indicates **time in HR : MM (AM/PM)**

**14. Speedometer:** Vehicle speed will be displayed in digital form in Km / Hr.

**15. Odometer:** The odometer shows total distance the vehicle has covered. Odometer can not be reset to 'Zero'.

**16. Trip Meter:** Trip 1 & Trip 2 shows the distance traveled since it was last reset to zero.

**17. Set Button:** It is used for setting Clock & Service reminder.

**18. Reserve Indicator:** It flashes continuously when petrol level in tank reaches reserve level (1 bar or less).

**19. ABS Indicator :** With Ignition switch ON the ABS indicator glows. When vehicle speed is more than 5 Km/h the ABS indicator goes off, if this indicator glows while vehicle is running, it means there is problem in ABS unit.

## Speedometer Setting



**pulsar**  
**NS160**



Service Reminder

### 1. Trip Meter Reset :

- Mode & Set push button is provided for selecting & resetting 'ODO/TRIP1/TRIP2'. LHS part of speedo console.

1.	Press mode push button for less than 2 sec.	Mode changes from 'ODO/TRIP1/TRIP2'
2.	Press set push button for more than 5 sec.	Selected mode 'TRIP1/TRIP2' will reset. Other TRIP mode will continue updating.

### 2. Service Reminder Reset ( wrench icon ) :

'Wrench' symbol glows when ODO meter reading reached to set Kms.

This icon will glow at-

1st : 450 Kms      2nd : 4450 Kms  
3rd : 9450 Kms    4th : 14450 Kms  
& subsequently at each 5000 Kms.

**Note :** Bring the motorcycle at authorised BAL dealership for re-setting the service reminder icon.

## Speedometer Setting



**pulsar**  
**NS160**



### 3. Clock Reset :


- Digital clock indicates time in HR & MM separated by colon ':'
- It is 12 hour clock.
- Initially ':' will be blinking
- Clock setting is possible in TRIP 1 mode only.

1.	Press mode push button for less than 2 sec.	TRIP1 Mode selected
2.	Press mode & set push button together for more than 2 sec.	':' stops blinking Digits starts blinking
3.	Press mode button for less than 1 sec.	Hour digits will increase by one.
4.	Press set button for less than 1 sec.	Minutes digits will increase. If mode/set button is pressed continuously then digits will stop blinking.
5.	Press mode & set button together for more than 2 sec.	Set value will be saved Exit clock setting mode Digits stop blinking ':' start blinking
6.	Clock set mode is selected & no editing is carried out for more than 5 sec.	Auto exit without saving set value. If engine/vehicle rpm is given then system will exit from clock set mode without saving set value.

## Control Switches



**pulsar**  
**NS160**

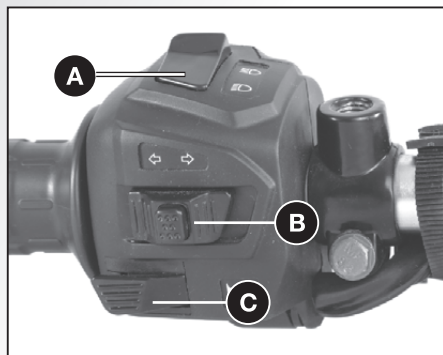


### Left Handle Bar Switches

**A. Hi / Lo Beam Switch :** Head lamp low or high beam can selected.

☰ : High Beam      ☉ : Low beam

**B. Turn Signal Switch :** When the turn signal knob is pushed to Left (↵) or Right (↶) respective indicator will start blinking.


To stop blinking push the knob in & release.

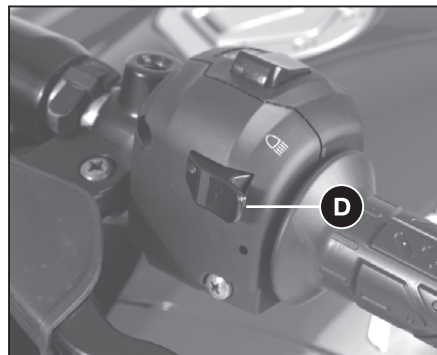

**C. Horn Button :** (🔊) Press button for sounding horn.

**D. Pass Switch :** Press the switch to operate high beam filament in head light. It is used to give signal to vehicles coming from opposite side while overtaking.

## Control Switches

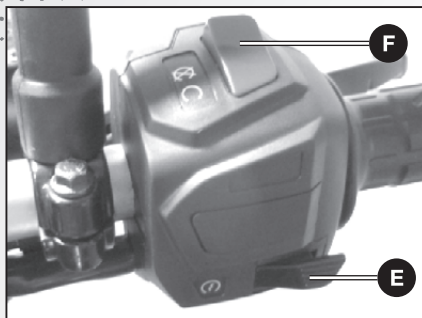

### E. Starter Button :

Starter button operates the electric starter. It is recommended to start the engine with the transmission in neutral.

Vehicle in Gear - Press clutch lever & operate starter button to start the engine.

### F. Engine Kill Switch :

The engine kill switch is used for switching ON & OFF the engine.

 : Engine OFF

 : Engine ON



### AHO Feature (Automatic Headlight 'ON')

There is no 'Light switch' on RH control switch.

Ignition switch 'ON' Engine 'OFF'	Speedometer illumination Tail lamp, Number Plate Lamp, Pilot Lamp & Control Switches Illumination will get 'ON'
Effect of pressing 'Pass Switch'	In addition to above Hi-beam will get 'ON'

### Ignition switch 'ON' & Engine Running


Speedometer lamp, Tail lamp, Number Plate Lamp, Pilot Lamp & Control Switches Illumination will get 'ON' in addition to above, headlamp will get ON as given below.

Hi/Low beam Switch	Headlamp Status	Effect of Pass Switch
Low beam 	Low beam 'ON'	Hi beam 'ON'
Hi beam 	Hi beam 'ON'	No change

## Rear Seat / Tool Kit



**pulsar**  
**NS160**

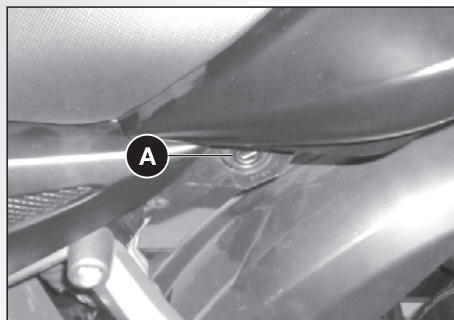

### Removal of Rear Seat

- Insert Key into lock (A)
- Turn the key clock wise.
- Pull upward front end of 'Rear seat'
- Take out 'Rear seat'




### Tool Kit Location

- It is located below the 'Rear seat'.
- 2 rubber straps are provided to hold the tool kit.



**CAUTION :** Always fit rubber strap for locking tool kit.

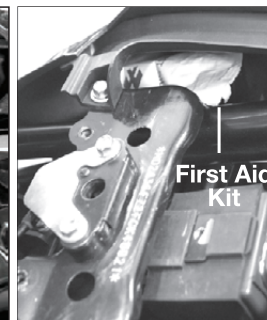


### First Aid Kit Location

- It is kept inside seat cowl RH side.

## Front Seat / Battery




**pulsar**  
**NS160**

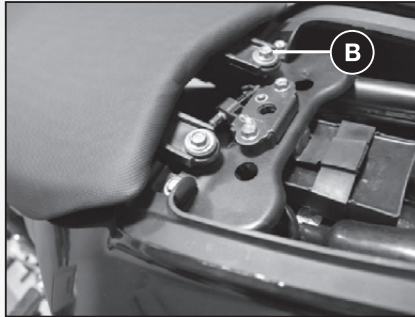

### Removal of Front Seat

- First remove 'Rear seat'.
- Remove 'Front seat' mounting bolts (B).
- Pull backward rear end of 'Front seat'.
- Take out 'Front seat'.



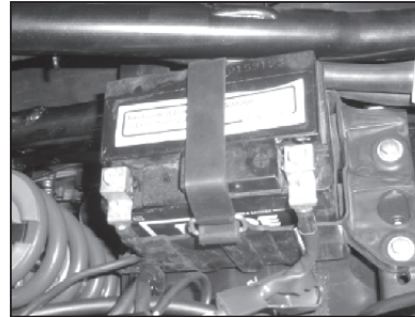


### Battery

- It is located below 'Front seat'.

## Fitment of Front & Rear Seat

Front seat lug & bracket

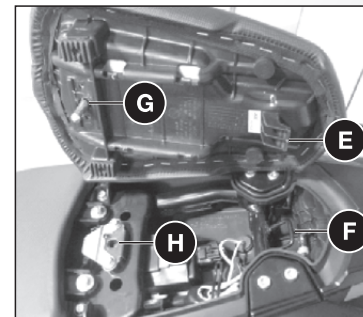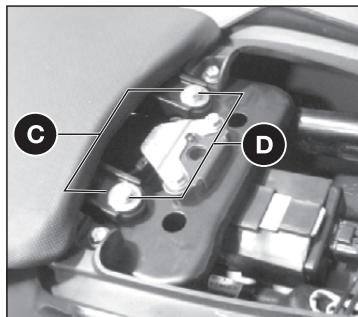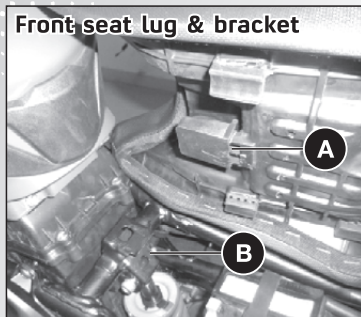

### Fitment of 'Front Seat'

- Match the lugs of 'Front seat' (A) with chassis bracket (B).
- Push 'Front seat' toward petrol tank.
- Match 'Front seat' rear brackets (C) with the holes provided on chassis.
- Tighten the bolts (D).

### Fitment of 'Rear Seat'

- First make sure 'Front seat' is fitted properly.
- Place 'Rear seat' on fitment location.
- Insert bracket (E) of seat into hook (F).
- Match the rod of 'Front seat' (G) with seat lock (H).
- Press front portion of seat.

## Daily Safety Checks



Before riding motorcycle be sure to check following items. Please give proper importance to these checks and perform all of them before riding motorcycle.

If any irregularities are found during these checks, refer to the Maintenance chapter & see your dealer for the action required to return the motorcycle to a safe operating condition.



**Warning :** Failure to perform these checks every day before you ride may result in serious damage or severe accident.

- Enough **fuel level** for planned distance of journey. No fuel leakage in fuel lines.
- **Engine oil** level (between upper and lower level mark)
- **Throttle cable** play of 2 ~ 3 mm. Smooth operation and positive return to closed position,


- **Brake Fluid** level above MIN mark provided on reservoir.
- **Drive Chain** slack of 20 ~ 30 mm adequately lubricated.
- Function of all **lights & horn**
- **Clutch lever** play - 2 to 3 mm
- Smooth **steering movement** without restriction.
- **Side stand** return to their fully up position.
- Correct **inflation pressure** in both tyres Adequate tyre tread depth - no cracks / cuts.
- Correct **rear viewing** span adjustment of mirror.

## How to Ride Your Bike



### 1. Starting The Engine :

- Turn the fuel tap to 'U' or 'V' position.
- Turn ignition switch key to 'Q' position.
- Put Kill switch in 'Q' position.
- Confirm that transmission is in neutral / press the clutch lever.
- If the engine is cold or when starting for first time, use manual choke (|) for quick starting. Choke lever is on LH side of carburettor.
- Keep throttle closed & press starter button,
- Release starter button as soon as engine starts.
- When the engine is warmed up enough to idle without using choke, return the manual choke to OFF position.

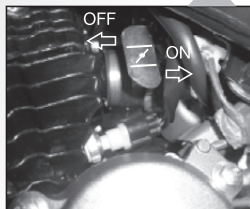

**Note :** Do not let the engine idle longer than 3 minutes otherwise it will overheat.



**Caution:** Do not operate the starter continuously for more than 5 seconds otherwise battery would get discharged.

Wait 15 sec. between each operation of the starter which will facilitate battery to recover.

**Note :** The motorcycle is equipped with a starter lockout switch. This switch ensures that engine does not start if the transmission is in gear. However, the engine can be started in any gear if the clutch lever is pressed.

**Note :** In case of battery discharged condition, vehicle will start by push start.



### 2. Shifting Gears :

- Close throttle & depress the clutch.
- Shift into next higher or lower gear.
- Open the throttle and release the clutch lever slowly and simultaneously.

### 3. Moving Off :

- Check that side stand is up.
- Depress the clutch lever.
- Shift into 1<sup>st</sup> gear.
- Open the throttle and release the clutch lever slowly and simultaneously.
- As the clutch starts to engage, open the throttle a little more, giving the engine just enough rpm to keep it from stalling.

## How to Ride Your Bike

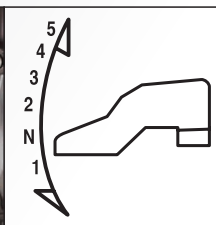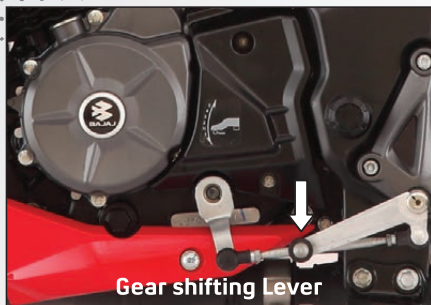

Gear shifting pattern

### Recommended Speed for Shifting Down

From 5 <sup>th</sup> to 4 <sup>th</sup> Gear	45 km/h
From 4 <sup>th</sup> to 3 <sup>rd</sup> Gear	35 km/h
From 3 <sup>rd</sup> to 2 <sup>nd</sup> Gear	25 km/h
From 2 <sup>nd</sup> to 1 <sup>st</sup> Gear	15 km/h



**Warning :** When shifting down to lower gear, do not shift at such high speed that engine rpm jumps excessively. This may cause engine damage, & rear wheel may skid. Downshifting should be done at recommended speeds as shown in table above.

### 4. Braking :

- Close the throttle completely, leaving the clutch engaged (except where shifting gears) so that the engine braking will help slow down the motorcycle.
- Shift down one gear at a time so that you are in Neutral when you come to a complete stop.
- When stopping, always apply both brakes at the same time. De-clutch as necessary to avoid engine stalling.
- Never lock the brakes, or it will cause the tyres to skid. When cornering, use brakes judiciously and do not de-clutch. Reduce your speed before you get into the corner. For emergency braking, disregard downshifting, and concentrate on applying brakes as hard as possible without skidding.

## How to Ride Your Bike



### 5. Stopping the Vehicle :

- Close the throttle completely.
- Shift the transmission into neutral.
- Bring the vehicle to complete stop.
- Turn the ignition switch off.


### 6. Parking the Vehicle :

- Support the motorcycle on a firm level surface with the side stand.
- Lock the steering.



**CAUTION :** Do not park on a soft or steeply inclined surface or the motorcycle may fall over.

Whenever vehicle is fallen, remove plug of 'Y connector drain tube' & drain out accumulated petrol.

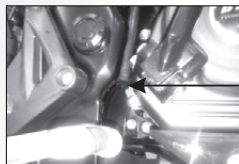

Location : Near Kick Lever

'Y' Connector drain tube plug

### 7. Running IN

Proper running-in is important for the better life & trouble free performance of the vehicle.

- During first 2000 kms running-in period do not exceed following speed limits.

Kms	1st	2nd	3rd	4th	5th
0 - 1000	10	20	30	35	45
1000 - 2000	15	30	40	45	55

- Always keep the speed below the limits mentioned in the table.
- Do not race the engine excessively.
- Do not start moving or race the engine immediately after starting. Run the engine for a minute at idle speed to give the oil a chance to workup into the engine.

### Fuel Saving Tips :

A well maintained vehicle and good driving can contribute a lot to the saving of petrol. Following are a few simple fuel saving tips.

## How to Ride Your Bike



### Good Riding Habits :

- Ride smoothly and steadily at an optimum driving speed of 40 to 50 Km/h
- Avoid harsh braking.
- Change the gear judiciously according to the speed and load requirement.
- Don't overload the vehicle above the specified payload.
- Use the accelerator judiciously.
- Cut off the engine if you want to stop for more than two minutes.

### How to check mileage (Fuel efficiency)

Best way to calculate mileage is by following the full tank to full tank method.

- Fill way tank full up to small mouth (brim).
- Run the bike for say 100 km.
- Fill the tank full again in same fuel filling station, probably with same fuel dispenser.
- Divide kilometer run / fuel quantity filled.

Ensure following maintenance points to get optimum performance from your bike.

Fuel	Check fuel lines & connections for leakage.
Spark Plugs	Inspect and clean spark plugs. Adjust electrode gap. Replace spark plugs as per P.M. Chart.
Air Filter	Clean the air filter element periodically. Replace as per Periodic Maintenance Chart.
Engine Oil	Check engine oil level. Always use recommended grade and quantity.
Brakes	Ensure that the brakes are not dragging / binding.
Clutch	Ensure correct clutch lever play.
Tyre Air Pressure	Always maintain recommended tyre pressure.
Carburettor	Clean & adjust the carburettor. Adjust idling speed.

## Safe Riding Tips

### Safe Riding Tips

- Always wear Helmet while driving or riding. Your helmet should conform to appropriate Indian standards.
- Read thoroughly the instructions given in this manual and follow them carefully.
- Avoid unnecessary accessories for the safety of both rider and other motorists.
- Get familiar and follow traffic rules & regulations in your states as well as general traffic signs.
- Familiarise yourself well with starting, acceleration and braking of the vehicle.
- When applying the brakes, use both front & rear brakes simultaneously. Applying only one brake may cause the vehicle to lose control.
- Riding at proper speed and avoiding unnecessary acceleration and braking are important not only for safety and low fuel consumption, but also for longer life of the vehicle.
- During monsoon drive the vehicle more cautiously. Remember vehicles skid more easily during light showers.
- Drive cautiously. Start early & reach your destination safely.




**pulsar**  
**NS160**

- Always carry vehicle registration & insurance papers, and a valid driving licence with you.
- Avoid driving on loose sand or stones where vehicle is likely to skid.
- Properly wrap-up loose clothes while driving or riding to avoid entangling in wheel or other objects on road.
- Always concentrate on riding for safety.

### Monsoon Care :

- It is suggested to customer to take appropriate care in area of heavy monsoon or high rainfall area. The appropriate surface preventive coat to avoid rusting / poor surface finish on account of adverse atmospheric conditions.
- Vehicle cleaning to be done with soft & clean wet cloth to avoid scratches on painted parts.
- Clean & lubricate all the important parts as detailed in a periodic maintenance chart.
- Do not apply direct water jet on painted, electrical / electronic parts.
- Do not obstruct engine cooling by adding mud protection sheet from front.

## Engine Oil

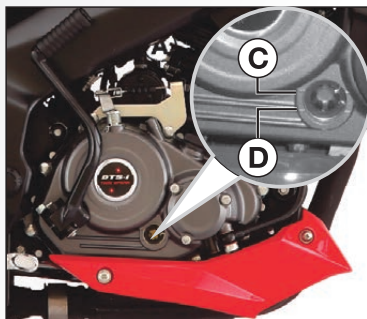

**A : Oil Filler Cap**  
**B : Oil Level Gauge**

### Engine Oil Level Checking :

- Check engine oil level every day. Park vehicle perpendicular to the ground on level surface.
- Check oil level through oil level gauge 'B'.
- Always maintain engine oil level between upper (C) and lower (D) mark provided on Cover RH. Top up with specified grade of oil if the oil level is below lower level mark.

### Engine Oil Capacity :

- Refill at servicing : 1200 ml.
- During engine overhaul : 1400 ml.



**pulsar**  
**NS160**

### Recommended Engine Oil:

Always insist on Bajaj Genuine Engine Oil for optimum engine performance and warranty benefits. It is a specially formulated oil for vehicles with DTS-i engines.



Model	Recommended Engine oil	Grade
Pulsar NS160	Bajaj DTS-i 10000	SAE 20W50 API 'SL' or JASO 'MA'

- **Engine oil replacement frequency : 1<sup>st</sup> service & then every 10,000 Km.**
- **Engine oil level top-up frequency : Every 5000 km.**



### CAUTION :

- It is most important to adhere to recommended grade & frequency of oil change for the purpose of long life of critical engine components. For details refer periodic maintenance chart.
- Do not reuse drained oil.

## Wheels - Tubeless Tyre



**Front Wheel**



**CAUTION :** Tubeless tyres are fitted in this motorcycle. The walls of the tyres in contact with the wheel rim should not be damaged in any way during fitment / removal of tyre. The tyre side walls in contact with wheel rim seals air.

### Removing Front Wheel :

- Park vehicle perpendicular to the ground on level surface.
- Remove speed sensor cable from case meter assembly.
- Remove front axle nut & take out.
- Remove front wheel assembly from fork.

### Wheel Puncture :

- Visit nearest known tubeless tyre repair shop to remove puncture.
- Remove puncture by Filler or Plug method only.
- Do not use patch method to remove puncture of tubeless tyre.

### Tyre Pressure :

Keep appropriate tyre pressure as mentioned below to increase life of the tyre & for better fuel consumption.

Front	: 1.75 kgf/cm <sup>2</sup> (25 PSI)
Rear (Solo)	: 2.00 kgf/cm <sup>2</sup> (28 PSI)
Rear (with pillion)	: 2.25 kgf/cm <sup>2</sup> (32 PSI)

**Note :** In case the motorcycle is fitted with imported tyres, compliance to respective indian standard & central motor vehicle rules has been ensured.

## Battery



### Battery : 12V - 4 Ah VRLA

- Battery is located below front seat.

### Battery Features :

- No topping-up is required
- Reduced self discharge, Enhance safety.
- No vent tube open to atmosphere hence no discharge of electrolyte through vent tube.



**CAUTION** : Do not drive / run vehicle in battery disconnected condition. It may lead to damage of electrical / electronic components.

- Environment care must be taken to dispose off the used battery.
- It is always recommended to hand over the same to the Authorised battery / Bajaj dealer for proper disposal of the same.
- When low battery icon pop-up on speedometer display, it is advised to reach Bajaj dealer & get it charged immediately.
- Warranty on battery is 18 months from the date of purchase of vehicle.

### How to keep battery healthy ?

- Switch 'Off' ignition when engine is not running.
- Get battery checked/ charged during periodic services.
- Do not press starter button for more than 5 sec. After 3 successive cranking, wait for 15-20 sec. for battery to recover.
- **Do not add extra electrical accessories such as - Remote, Bigger Horn, Musical brake light etc. This will reduce life of battery**
- Disconnect battery +ve & -ve wires if vehicle is to be stored for more than 2 weeks. This avoids self discharge.

## Periodic Maintenance Information





**pulsar**  
**NS160**

### Spark Plug

- Remove spark plugs by using plug spanner.
- Clean the spark plugs.
- Adjust the gaps if incorrect by bending outer electrode carefully.


**Spark Plug Gap** : 0.7 to 0.8 mm.

**Spark Plug** (2 Nos.) : Champion

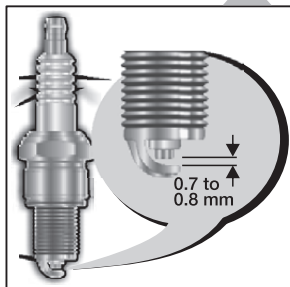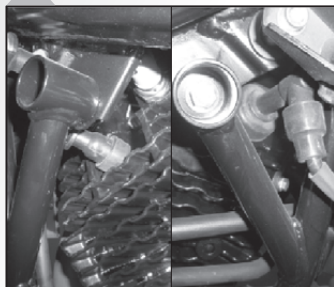

### Drive Chain Slackness


- Chain slackness will have to be adjusted whenever required.
- Std. Chain slackness 20 ~ 30 mm.
- Marking on chain adjusters should be identically positioned on both sides.

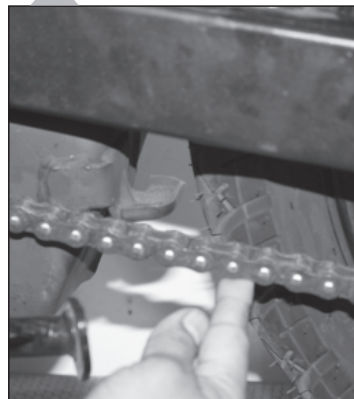

## Periodic Maintenance Information



**Drive  
Chain  
Cleaning**

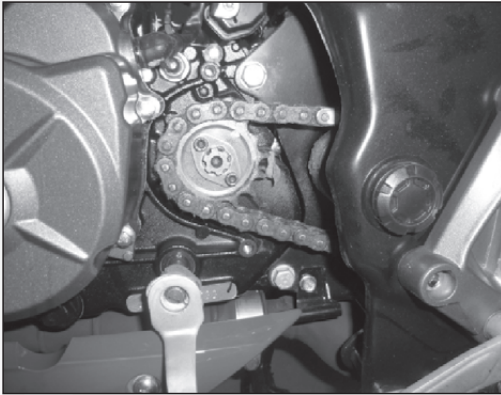

Drive chain must be cleaned & lubricated as per periodic maintenance schedule.

### **Drive Chain (O-ring type)**

- 'O' rings must always be kept wet for best performance hence lubricate every 500 Km.
- **O-ring chain lubrication can easily be done by owners using Bajaj 'Chain Lube Spray Can' available with Bajaj dealers.**



**Drive  
Chain  
Lubrication**

### **Method of O-ring Chain Lubrication :**


- Park vehicle perpendicular to the ground on level surface. Clean the chain by using lint free cloth (If excessive mud / slush found approach Bajaj Service Center for proper cleaning)
- Shake the can vigorously by holding vertically upright till the noise of steel ball inside heard uniformly.
- Hold spray can at the back of rear sprocket with extension tube nose at 5-10 cm.
- Rotate the wheel in reverse direction & spray the lube on middle portion of the chain up to full length of the chain.

## Brake Fluid



**pulsar**  
**NS160**

**Front  
Brake  
Fluid  
Reservior**

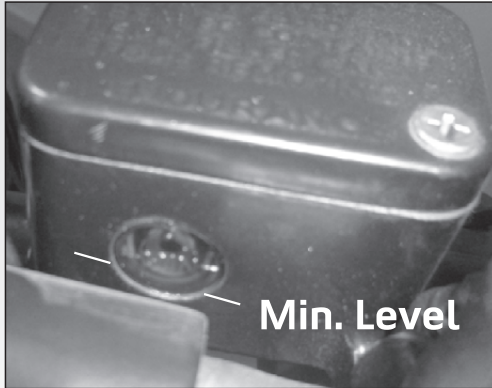

**Rear Brake  
Fluid  
Reservoir**

### Front & Rear Brake Fluid Level

- Front brake fluid reservoir is located on RH side of Handle bar.
- Rear brake fluid reservoir is located behind RH pillion holder bracket.
- To check the brake fluid level, Park the vehicle perpendicular to the ground on level surface with handle bar in straight ahead condition.

- Always ensure that brake fluid level is above 'MIN' mark given on inspection Window.
- Incase of level drop, use only DOT-3/DOT-4 brake fluid (from sealed container) for top up & replacement.

## Free Service Guidelines



**pulsar**  
**NS160**

### Free Service Guidelines

Customer ID :

#### Instruction to avail Free Service through Digitized Free Service Coupon

Please follow following procedure : -

- Please provide your mobile number to Dealer at the time of buying of new Bajaj Vehicle.
- In case of change in mobile number, please update to Dealer / ASD.
- You will receive the Customer ID through SMS at the time of buying of new vehicle.
- Please note the Customer ID in Owner's Manual for your reference.
- During Free Service, please provide your Customer ID to Dealer / ASD workshop.
- When you are at Dealership / ASD workshop for Free Service, you will receive the 'Unique Coupon Number' (UCN) through SMS in your mobile.
- Please inform the UCN to Dealer / ASD at the time of Free Service.  
(ASD-Authorised Service Dealer)

#### Periodic Service Criteria

Service	Days	Kms	whichever occurs earlier
1st Free Service	30~45	500~750	
2nd Free Service	240	4500~5000	
3rd Free Service	360	9500~10000	
Subsequent Paid services	120 Days from last Service	Every 5000 Km after previous service	

**Availing all Free / Paid Services, replacing mandatory periodic parts & engine oil will entitle warranty eligibility.**

## Periodic Maintenance & Lubrication Chart



**pulsar**  
**NS160**

Sr. No.	Operation		RECOMMENDED FREQUENCY							Subsequent
		Servicing	1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
		Kms	500 750	4500 5000	9500 10000	5000 Km after Previous Service				
1.	Water wash & dry the vehicle completely		✓	✓	✓	✓	✓	✓	✓	Ensure to prevent water entry in Petrol tank, Silencer & electrical Parts. Use caustic free detergent for washing.
2.	Engine oil (Bajaj DTSi 10000 oil)	C,R	<div>R</div>	Top Up	<div>R</div>	Top Up	<div>R</div>	Top Up	<div>R</div>	BGO DTSi 20W50
3.	Engine oil filter	C,R	<div>R</div>		<div>R</div>		<div>R</div>		<div>R</div>	
4.	Oil strainer	CL	CL		CL		CL		CL	
5.	Spark plug	CL,A,R				CL,A			<div>R</div>	
6.	Air cleaner element ***	R				<div>R</div>			<div>R</div>	Viscous filter-no cleaning
7.	SAI foam filter	CL,R				CL			<div>R</div>	

✓ Tick in the box ☐ R after replacing the periodic parts.

## Periodic Maintenance & Lubrication Chart



**pulsar**  
**NS160**

Sr. No.	Operation		RECOMMENDED FREQUENCY							Subsequent
		Servicing	1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
		Kms	500 ~ 750	4500 ~ 5000	9500 ~ 10000	5000 Km after Previous Service				
8.	Air filter cover 'O' ring	CL,R				<div>R</div>			<div>R</div>	
9.	In line paper filter*	R				<div>R</div>			<div>R</div>	
10.	Carburettor rubber duct	C,R				C,R				Replace if required.
11.	Fuel pipe	C,R	C	C	C	<div>R</div>	C	C	<div>R</div>	
12.	Valve tappet clearance	C,A				C,A			C,A	
13.	Sealed drive chain* cleaning & lubrication	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	Customer to apply OKS chain lub spray at every 500 kms.
14.	Engine air breather tube	C,R				C,R			C,R	Replace if required.
15.	Silencer drain hole cleaning	CL		CL	CL	CL	CL	CL	CL	

✓ Tick in the box ☐ R after replacing the periodic parts.

## Periodic Maintenance & Lubrication Chart



**pulsar**  
**NS160**

Sr. No.	Operation		RECOMMENDED FREQUENCY							Subsequent
		Servicing	1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every 5000 Km after Previous Service				
		Kms	500 ~ 750	4500 ~ 5000	9500 ~ 10000					
16.	Brake pad - Check wear indicator		C,R	C,R	C,R	<div>R</div>	C,R	C,R	<div>R</div>	
17.	Brake fluid level - top up / replace	C,A,R				C,A			<div>R</div>	Use recommended brake fluid (DOT4)
18.	Disc brake assly – Check functionality, leakage or any other damage.	C			C		C		C	
19.	Clutch & Throttle cables free play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	Use free play gauge
20.	Charge condition of battery	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	Use recommended Midtronics battery tester
21.	Wiring harness & Battery connections- routing, tie bands & clamps tightness.	C,A,L,T	C,A,L,T	C,A,L,T	C,A,L,T	C,A,L,T	C,A,L,T	C,A,L,T	C,A,L,T	Apply petroleum jelly on battery terminals
22.	Ignition switch barrel cleaning	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	Use WD40 spray

✓ Tick in the box ☐ R after replacing the periodic parts.

## Periodic Maintenance & Lubrication Chart



**pulsar**  
**NS160**

Sr. No.	Operation		RECOMMENDED FREQUENCY							Subsequent
		Servicing	1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
		Kms	500 ~ 750	4500 ~ 5000	9500 ~ 10000	5000 Km after Previous Service				
23.	Handle bar control switches	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	Use WD40 spray
24.	contacts cleaning Steering play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
25.	Steering stem bearing*** & Cap steering bearing (Plastic)**	C,CL,L,R			C,CL, L,R		C,CL, L,R		C,CL, L,R	Check & replace if Damaged. Use HP Lithon RR3 grease for lubrication.
26.	Main stand & side stand pin	CL,L			CL,L		CL,L		CL,L	Use AP grease.
27.	All fasteners tightness	C,T	C,T	C,T	C,T	C,T	C,T	C,T	C,T	
28.	Engine foundation silent bushes	C				C			C	
29.	General lubrication-Clutch lever, front brake lever.	L	L	L	L	L	L	L	L	Use AP grease.
30.	Idle speed / CO%	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	

✓ Tick in the box ☐ after replacing the periodic parts.

## Periodic Maintenance & Lubrication Chart



**pulsar**  
**NS160**

Sr. No.	Operation		RECOMMENDED FREQUENCY							Subsequent
		Servicing	1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
		Kms	500 ~ 750	4500 ~ 5000	9500 ~ 10000		5000 Km after Previous Service			
31.	SAI, EVAP hoses - Check functionality, leakage or any other damage	C,R	C,R	C,R	C,R	C,R	C,R	C,R	C,R	Replace if cut / damaged
32.	EVAP drain tube cleaning**	CL	CL	CL	CL	CL	CL	CL	CL	

✓ Tick in the box ☐ after replacing the periodic parts.

**\*\*As applicable to model**

**\*\*\*More frequent cleaning may be required while driving in dusty environment.**

**C : Check, A : Adjust, CL : Clean, R : Replace, T : Tighten, L : Lubricate**

**Note :** Periodic parts, Oil, Coolant, Filters, All types of greases, Cleaning agents, Cables, Wear & tear parts, Rubber 'O' rings / oil seals / pipes, Gaskets to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.



**pulsar**  
**NS160**

## Non-Use Maintenance

Non-use maintenance is necessary if a vehicle remains off road for a longer duration (more than 15 days\*\*). The correct and careful non-use maintenance carried out before storing the vehicle will prevent the vehicle from rusting and from such other non-operational damages like fire hazards.

- Clean the entire vehicle thoroughly.
- Empty the fuel from the fuel tank and carburettor float bowl (if fuel is left in for a longer time, the fuel will break and gummy substance could clog the carburettor).
- Remove spark plug & put several drops of engine oil into the cylinder. Kick engine over slowly a few times to coat cylinder wall with oil & install back spark plug.
- Set the vehicle on a box or a stand so that both wheels are raised off the ground.
- Spray oil on all unpainted metal surfaces to prevent rusting. Avoid getting oil on rubber parts or brake liners.
- Cover entire vehicle neatly. Make sure that storage area is well ventilated & free from any source of flames or spark.
- Fill 10% excess air pressure in both wheels.
- Do not apply oil on front brake disc, to prevent rusting. If the front brake disc rusts during storage, do not attempt to clean it with soap water. The rust will go off automatically during first few application of brake.

### **\*\* For Battery :**

- a. Remove battery and keep it on wooden plank, in properly ventilated area.
- b. Before taking the vehicle for use.
  - Get the battery recharged from the Authorised Service Center / Battery Dealer.
  - Apply petroleum jelly on battery terminals.

### **Preparation for regular use after storage :**

- Follow daily safety checks.

## Warranty : Scope & Limit



Bajaj Auto Limited gives the following warranty in respect of the **"Pulsar NS160"** motorcycle manufactured by them.

Every possible care and precaution has been taken to ensure quality in respect of the material & workmanship in the vehicles manufactured by us. Bajaj Auto Limited will repair or replace at their Authorised Workshops, free of charge, part or parts thereof as may be found, on examination, to have manufacturing defect within a period of **5 Years or 75,000 Kms.**, whichever occurs earlier from the date of sale subject to fulfillment of condition stipulated in part A, B & C given here under

**Warranty is applicable for only first owner of vehicle.**

### **Part A:**

Warranty claims in respect of such items like shock absorbers, speedometers etc. though claimed through us, are subject to acceptance of the respective manufacturers. In all such cases the decision of the respective manufacturer will be final and binding.

Proprietary parts like tyres, tubes, battery and spark plugs are warranted by their respective manufacturers and should be claimed on them directly by the customer. Bajaj Auto Limited shall not be Liable to replace them though their dealer will give full assistance in preferring such claims.

Bajaj Auto Limited undertake no liability in the matter of consequential loss or damage caused due to the failure of the parts. Delay, if any, at the repairing workshop in carrying out repair to vehicle shall not be a ground for extending the warranty period, nor shall it give any right to the customer for claiming any compensation for damages.

Bajaj Auto Limited reserves the right either to repair or replace the defective parts.

Where a defective part can be replaced by part/s of alternative brand/s, which are normally used by Bajaj Auto Limited in the course of manufacture, Bajaj Auto Limited reserves the right to carry out the replacement by a part or parts of any such alternative brand/s.

This warranty and any claim arising there from is subject to Pune jurisdiction only.

### **Part B:**

No claim for exchange or repair can be considered unless the customer :

- a. Ensures that immediately upon detection of the defect, he approaches any nearest Authorised Bajaj Vehicle Dealers & Recommended Authorised Service Dealers with the concerned vehicle and enables him to remove and despatch the part / parts attributing to the manufacturing defect to



## Warranty : Scope & Limit

the Company.

- b. Produces the Owner's Manual, in original, to enable that dealer to verify the details.

It must be expressly understood that claims forwarded directly to us by the owner / customer will not be entertained at all and such defective part/parts thus forwarded by them will lie at our factory at their own risk, and this warranty shall not be enforceable.

### To avail benefits of warranty, following are mandatory

1. Availing of Initial 3 Free Services without lapse.
2. Availing subsequent paid services at 5000 kms. or 120 days whichever occurs first without any lapse.
3. Availing of all above services at the Authorised Vehicle Dealers & Recommended Authorised Service Dealers.
4. Usage of only recommended engine oil  
**"Bajaj DTS-i 10000"** at specified frequency for drain interval of 10,000 kms. & engine oil level top-up at 5000 kms.
5. Replacing mandatory periodic parts such as air filter, oil filter etc. as per periodic maintenance schedule.

### Part C :

Further this warranty is NOT applicable to :

1. Normal maintenance operations like brake & clutch adjustments, cleaning of fuel system, engine tune-up or such other adjustments.
2. Parts subjected to normal wear & tear like Clutch Plates, Brake Shoes, Chain, Sprockets, Fork Oil Seal, Spark Plug, Control Cables, Brake Pads.
3. Replacement of bulbs & rubber components like grommets, 'O' rings, bellows as well as filters, packings, gaskets, fasteners etc.
4. Painted parts. Only blistering or peeling off of paint film are covered under warranty. Any defect arising out of external damages or due to usage of protective covers /non recommended protective coatings, adverse atmospheric condition etc. is not allowed under warranty.
5. All consumables like Engine oil, Fork oil, Brake Oil, Grease etc. are chargeable to customer.
6. Any defect arising due to above consumables not changed as per scheduled or if used other than the recommended one.
7. Never drive your bike through flooded roads or a flooded patch, damage to the engine parts due to water entry is not covered under warranty.

## Warranty : Scope & Limit



8. All chrome plated parts are prone to rust or corrosion in coastal area or in acidic environment or due to neglected cleaning etc. However chrome film peeling is covered under warranty in general atmospheric conditions. Blue/ Yellow colouration of silencer near exhaust port is permissible and hence not covered under warranty.
9. Oxidation of unpainted/painted crankcase, cylinder block, cylinder head etc. in acidic environment or in a coastal area.
10. Parts of the vehicle that have been subjected to misuse, accident, negligent treatment OR which have been used in conjunction with parts & an equipment not manufactured or recommended for use by Bajaj Auto Limited, if in the sole judgement of Bajaj Auto Limited, such use prematurely affects the performance and reliability of the vehicle.
11. Parts of the vehicle that have been altered and modified or replaced in unauthorized manner like use of wider tyres, loud silencers etc and which in the sole judgement of the Bajaj Auto Limited affects its performance and reliability.
12. **Vehicles which are not being serviced at recommended dealers as per the service schedule described or which have not been operated or**

**maintained in accordance with the instructions maintained in the Owner's Manual.**

13. Vehicles used for any competition or race and/or for attempting to set up any kind of record.
14. Any failure arising due to use of adulterated or bad quality fuel.  
Parts affected due to bad fuel quality are not covered Under warranty.
15. If additional electrical accessories such as - Remote, Bigger Horn, Musical brake light etc. Fitted on vehicle.
16. If the vehicle has been used for commercial purpose like Taxi or any other means of commercial transportation.

Bajaj Auto Limited reserves the right to make any changes in design or to add any improvements on the vehicle at any time without incurring any obligation to install the same on a vehicle previously supplied and sold. Also, the conditions of this warranty are subject to alteration without any notice.

This warranty is the entire written warranty given by Bajaj Auto Limited for "Pulsar NS160" motorcycle' and no other dealer or its or his agent or employee is authorised to extend or enlarge this warranty.

[illegible]

ENGINE NO. : 

			-				-			
--	--	--	---	--	--	--	---	--	--	--

 Sold on.: \_\_\_\_\_

Customer's Name Mr/Mrs/Miss : \_\_\_\_\_

Address : \_\_\_\_\_ Contact No.: \_\_\_\_\_

1. Owner's Manual

## 5. Standard Accessories

2. 2 nos of key

6. Battery Make \_\_\_\_\_ Sr. No. \_\_\_\_\_

### 3. Set of tools

7. Tyre Fr Make \_\_\_\_\_ Sr. No. \_\_\_\_\_

#### 4. First Aid Kit

Rr Make \_\_\_\_\_ Sr. No. \_\_\_\_\_

The Vehicle has been delivered to my satisfaction & I have understood all terms and conditions of warranty, service schedules & maintenance tips and shall abide by them.

Dealer Code :

Dealer Name :

Address :

Contact No. :

Customer's Signature (To be filled in by the dealer)

Imp - Dealership should take customer sign & maintain the record of this 'Delivery Certificate'.



*pulsar*  
**NS160**

## Battery Warranty Card

### BATTERY WARRANTY CARD

MAKE OF BATTERY : .....

MFG. CODE OF BATTERY :

BATTERY SR. NO.:

BATTERY CHARGING DATE : .....

TYPE OF BATTERY : .....

VEHICLE SALE DATE : .....

NAME OF OWNER AND ADDRESS : .....

TYPE OF VEHICLE : .....

REG. NO.:

FRAME NO.:

ENGINE NO.:

#### SERVICE RECORD

Sr. No.	Date	Age Mths.	Specific Gravity	Voltage	Remarks	Dealer's Stamp & Signature	*Code
1							
2							
3							
4							
5							
6							

\* Code For Remarks:

LL : Low electrolyte level.

AE : Electrical system needs attention.

IR : Insufficient running of vehicle.

CB : Cover broken.

BC : Broken Container.

PM : Poor maintenance.

BA : Battery abused.

Note : Customer should insist that "Service Record" must be filled by respective authorised battery dealer as proof of specified maintenance for easy settlement of claim, if any.

**TO BE FILLED IN BY BATTERY DEALERS / DISTRIBUTORS  
IN CASE OF CLAIM**



**pulsar**  
**NS160**

Name of Dealer & Code : \_\_\_\_\_

Date of claim : \_\_\_\_\_ Battery Type : \_\_\_\_\_

Serial No. : \_\_\_\_\_ Date of Fitment : \_\_\_\_\_

Failure Mode (Please tick as applicable)

- |                     |                            |
|---------------------|----------------------------|
| • Loose connection  | • Overcharge / Undercharge |
| • Internal Short    | • Reverse Charge           |
| • Plate Shedding    | • Does not Hold Charge     |
| • Wrong Assembly    | • Left Lying Idle          |
| • Wrong Application | • Terminal Corroded        |

# Claim Accepted

## Claim Rejected

Details of Repair, if any \_\_\_\_\_

Note:

Please contact nearest respective authorised battery dealer for details immediately after purchase of vehicle.

Use only Bajaj Genuine Parts



**pulsar**  
**NS160**



THE WORLD'S  
FAVOURITE  
INDIAN

Always Use  
Bajaj Genuine  
High Performance  
Engine Oils

**4T**  
Premium  
Engine Oil

BAJAJ  
**DTS-i**  
10,000

**20W 50**



BAJAJ  
**DTS-i**  
10,000

**20W 50**



Top up  
bottle  
100 ml.

**Long Drain Interval of 10,000 kms\***



Reduced Friction



Clean Engine Parts,  
Longer Engine Life



Smooth Clutch  
Control



\* Top up recommended at 5,000 kms



We are committed to provide the best of sales & service experience, however should you require any additional assistance, please call our Call centre on the number given below.



: 7219821111

**Call charges are as applicable**

**Call centre timings :- Monday to Sunday  
(09 : 00 am - 08 : 00 pm)**



Please download customer care app from '**Google play store**' and '**Apple store**' and book the vehicles for servicing and more on your phone.

E-mail : [customerservice@bajajauto.co.in](mailto:customerservice@bajajauto.co.in)

Web Site : [www.bajajauto.com](http://www.bajajauto.com)

**CIN : L65993PN2007PLC130076**