

# Owner's Manual



THE **WORLD'S**  
**FAVOURITE**  
**INDIAN**

*pulsar*

**150/150** Twin Disc / **180**



To keep your bike in perfect running condition, please follow the periodic maintenance services which includes **3 Free and subsequent Paid services**, as per the schedule contained in this booklet.

अपनी बाइक को सही चलती हालत में रखने के लिए, कृपया आवधिक रखरखाव सेवाओं का पालन करें जिसमें 3 निःशुल्क और बाद में भुगतान सेवाएं शामिल हैं, इस पुस्तिका में दिए गए अनुसूची के प्रति।

आपली बाईक परिपूर्ण स्थितीत चालू ठेवण्यासाठी कृपया या बुकलेटमध्ये दिलेल्या शेड्यूलनुसार पीरिऑडिक मेन्टेनन्स सर्व्हिसेचे अनुकरण करा. यात 3 फ्री आणि त्यानंतरच्या पेड सर्व्हिसेस समाविष्ट आहेत.

ನಿಮ್ಮ ಬೈರ್ ಸಂಪೂರ್ಣ ಚಾಲನಾ ಸ್ಥಿತಿಯಲ್ಲಿರಬೇಕು. ದಯವಿಟ್ಟು ಈ ಕ್ರೆಡಿಟಿಯಲ್ಲಿ ನಮೂದಿಸಲಾದ ಶೇಡ್ಯೂಲ್ ಸಂತ ನಿಯತಕಾಲಿಕ ನಿರ್ವಹಣಾ ಸೇವೆಗಳನ್ನು ಅನುಸರಿಸಿ. ಇವು 3 ಉಚಿತ ಮತ್ತು ನಂತರ ವಾವತಿ ಸೇವೆಗಳನ್ನು ಒಳಗೊಂಡಿರುತ್ತವೆ.

உங்களுடைய வைக்கை மிக நன்றாக ஓடும் நிலையில் வைத்திருப்பதற்கு, இதற்கு கையேட்டில் கொடுக்கப்பட்ட அட்டவணையில் உள்ளவாறு 3, லைச மற்றும் தொட்ச்சியான கட்டண சேவைகளை உள்ளடக்கிய காலமுறை பராமீடு சேவைகளை தயவு செய்து பயன்படுத்துவது.

మీ బ్రత చక్కటి రన్నెంగ్ కండిషన్ లో ఉండాలంటే టుక లెట్లో ఉన్న పెడ్యూల్ ప్రకారం క్రమం తప్పకుండా మెయింటెనెన్స్ సర్వీసు చేయించండి. ఇందులో 3 ఉచిత సర్వీసులు, ఆ తర్వాత పెయిడ్ సర్వీసులు ఉన్నాయి.

നിങ്ങളുടെ വൈകിടത്തിൽ നിന്നും  
 കണ്ടിടത്തിൽ സംരക്ഷിക്കാൻ സൗജന്യവും തുടർന്ന് പണം  
 നൽകിയുള്ളതുമായ മെയ്നറസ് സർവീസുകളുടെയുമായി  
 സഹായസമ്പന്നമായ ഈ ബുക്കിംഗ് ക്രമപട്ടികയിൽ  
 കാണിച്ചുകൊണ്ട് പാലിക്കുക.

আপনার বাকি নির্ভুলভাবে চালু অবস্থায় রাখার জন্য, নির্দিষ্ট সময় অন্তর রক্ষণাবেক্ষণ পরিষেবা অনুসরণ করুন যার মধ্যে আছে ৩টি বিনামূল্যে এবং পরবর্তী মূল্যভিত্তিক পরিষেবা, এই পণ্ডিকার অন্তর্ভুক্ত তালিকা অনুযায়ী।

ଆପଣଙ୍କର ବାକରକୁ ଉପଯୁକ୍ତ ରିଟିଂ ଅବସ୍ଥାରେ ରଖିବା ପାଇଁ ପିରିଡିକ୍ ମ୍ୟୋଡେନାଭସ୍  
ସର୍ବିସ୍‌ସ୍ ଆପଣଙ୍କ କରକୁ ଯୋଡିଥିବେ ଅବଶ୍ୟକ୍ତ ରିଟିଂ 3 ଟି ମାଗଣା ଓ ପରବର୍ତ୍ତୀ ପ୍ରେରଣ  
ସର୍ବିସ୍‌ସ୍ ଯାହାର ପିଆଁଲ ଏହି ବ୍ଲକ୍‌ଚେନ୍‌ରେ ପ୍ରମାଣ କରାଯାଇଛି ।

તમારી બાઇકને સંપૂર્ણ ચાલુ સ્થિતિમાં રાખવા માટે, કૃપા કરી નીચે મુજબ સમયાંતરની જાળવણી સર્વિસનું પાલન કરો જેમાં ઉ મફત અને પછી ચૂકવણી સર્વિસનો સમાવેશ થાય છે, આ પુસ્તિકામાં સમાવિષ્ટ સમયક્રમ મુજબ

ਆਪਣੀ ਬਾਣੀਕ ਨੂੰ ਚਲਦੀ ਹਾਲਤ ਵਿੱਚ ਰਖਣ ਲਈ, ਕਿਰਪਾ ਆਵਰਤੀ-ਸੰਭਾਲ ਸੇਵਾ ਦਾ ਪਾਲਨ ਕਰੋ ਜਿਸ ਵਿੱਚ 3 ਮੁਫਤ ਅਤੇ ਬਾਦ ਵਿੱਚ ਭੁਗਤਾਨ ਸੇਵਾਵਾਂ ਸ਼ਾਮਲ ਹਨ, ਇਸ ਕਿਤਾਬ ਵਿੱਚ ਦਿੱਤੇ ਗਏ ਅਨੁਸੂਚੀ ਦੇ ਪਤਿ।

আপোনাৰ বাইকখন সঠিকভাৱে চলি থকা হিতিত ৰাখিবলৈ, অনুগ্ৰহ কৰি নিয়মীয়া তত্ত্বাবধান সেৱা অনুসৰণ কৰিব য'ত অন্তৰ্ভুক্ত থাকে 3 টা বিনামূলীয়া আৰু তাৰ পিছৰ পৰিশোধ কৰা সেৱা, এই পদ্ধিকাখনত অন্তৰ্ভুক্ত অনুসী অনসৰি।

اپنی بائیک کو بہترین رنگ حالت میں رکھنے کے لیے، ہر اے مہربانی وقت سے مینٹیننس کی خدمات پر عمل کریں جس میں شامل ہیں: اس کتابچہ میں دئے گئے وقت کے مطابق 3 مفت سروسز اور بعد کی بیڈ سروسز۔

Welcome to the Pulsar family!

You are now the proud owner of India's No.1 sports bike. By No.1 we are talking about unparalleled performance, superior technology and incredible market leadership that Pulsar today enjoys. This makes the Pulsar you ride, unbeatable and unchallenged both on and off the road.

Before you ride out, please read this Owner's Manual carefully and familiarize yourself with the operating mechanism, controls and maintenance requirements of your Pulsar. This will ensure you a safe and trouble free ownership experience.

To keep your bike in perfect running condition and deliver consistent performance, we have specially programmed the periodic maintenance services which includes 3 Free and subsequent Paid services, as per the schedule contained in this booklet. We earnestly advise you to avail all these services at any of our Bajaj Dealers or Authorised Service Dealers, who are well equipped with all necessary facilities / genuine parts / oil and trained manpower to ensure the best care for your Pulsar. Your **Pulsar** comes with a warranty of **5 Years or 75,000 Kms** whichever occurs earlier from the date of sale. For details please refer to "Warranty : Scope & Limits" given in this manual.

Should you require any additional information feel free to contact us on our helpline numbers or e-mail us at: **customerservice@bajajauto.co.in** or visit the Bajaj Auto website [www.bajajauto.com](http://www.bajajauto.com)

To be a part of the Pulsarmania, visit [www.mypulsar.com](http://www.mypulsar.com) and join the Pulsar fanpage on facebook: [www.facebook.com/mypulsar](http://www.facebook.com/mypulsar)

Rev up, shift gears and enjoy the Pulsar experience...

**SERVICE DEPARTMENT**  
**BAJAJ AUTO LIMITED**

# Table of Contents



## Description

1. Technical Specifications	1
2. Identification Data	3
3. Location of Parts	4
4. Steering cum Ignition lock / Fuel Tap	5
5. Fuel Tank Cap / ABS System	6
6. Speedometer Details-ABS/Non ABS	7
7. Control Switches	8
8. Removal & Fitment of Side Covers	10
9. Removal & Fitment Seat	12
10. Battery / Tool kit	13
11. Daily Safety Checks	14
12. How to ride your Bike	15
13. Safe Riding Tips	19
14. Engine Oil	20
15. Wheels - Tyre	21
16. Periodic Maintenance Information	22
17. Periodic Maintenance & Lubrication Chart	26
18. Free Service Guidelines	31
19. Non Use Maintenance	32
18. Delivery Certificate	33
19. Warranty Scope & Limit	34
20. Battery Warranty Card	

## Safety and Warning information :



**Warning :** This indicates that a potential hazard or injury to you or other persons & to the vehicle can happen if advice provided is not followed.



**Caution :** This indicates that a potential hazard that could result in vehicle damage. Follow the Advice provided with the caution.

## Notice:

The description and illustration in this booklet are not to be taken as binding on the manufacturers. The essential features of the type described and illustrated herein remaining unaltered. Bajaj Auto Limited reserves the right to carry out at any moment without being obliged to bring this booklet upto-date & to do modifications on the vehicle, parts or accessories as may be convenient and necessary.

# Technical Specifications



	Pulsar 150	Pulsar 150 Twin Disc	Pulsar 180
Engine	: 4 stroke, Natural air cooled	4 stroke, Natural air cooled.	4 stroke, Natural air cooled.
Bore x Stroke	: 56 mm x 60.7 mm	56 mm x 60.7 mm	63.50 mm x 56.40 mm
Engine Displacement	: 149.5 cc	149.5 cc	178.60 cc
Compression Ratio	: 9.5 +/- 0.5 : 1	9.5 +/- 0.5 : 1	9.5 +/- 0.5 : 1
Idling RPM	: 1400 +/- 100	1400 +/- 100	1400 +/- 100
Max. Net Power	: 10.3 Kw (14 Ps) at 8000 RPM	10.3 Kw (14 Ps) at 8000 RPM	17.02 Ps at 8500 RPM
Max. Net Torque	: 13.4 Nm at 6000 RPM	13.4 Nm at 6000 RPM	14.22 Nm at 6500 RPM
Ignition System	: DC CDI	DC CDI	DC CDI
Spark Plug	: Champion RG4HC, 2 Nos.	Champion RG4HC, 2 Nos.	Champion RG4HC, 2 Nos.
Spark Plug Gap	: 0.7 to 0.8 mm	0.7 to 0.8 mm	0.7 to 0.8 mm
Transmission	: 5 speed constant mesh.	5 speed constant mesh.	5 speed constant mesh.
Front Brake	: Disc Brake	Disc Brake	Disc Brake
Rear Brake	: Drum Brake	Disc Brake	Disc Brake
Fuel Tank Capacity			
Full	: 15 litres	15 litres	15 litres
Reserve	: 3.2 litres	3.2 litres	3.2 litres
Usable Reserve	: 2.0 litres	2.0 litres	2.0 litres
Dimensions	:		
Length	: 2055 mm	2035 mm	2035 mm
Width	: 755 mm	765 mm	765 mm
Height	: 1060 mm	1115 mm	1115 mm
Wheel base	: 1320 mm	1345 mm	1345 mm
Ground clearance	: 165 mm	165 mm	165 mm

Note : • All dimensions are under UNLADEN condition.  
• Above information is subject to change without any notice.

# Technical Specifications



	<b>Pulsar 150</b>		<b>Pulsar 150 Twin Disc</b>		<b>Pulsar 180</b>	
Tyre Size	Front	: 2.75-17 41P, Tubeless : 80/100-17 46P, Tubeless	90/90-17 49P, Tubeless		90/90-17, 49P, Tubeless	
	Rear	: 100/90-17 55P, Tubeless	120/80-17, 61P/S, Tubeless		120/80-17, 61P/S, Tubeless	
Tyre Pressure	Front	: 1.75 kg/cm <sup>2</sup> (25 PSI)	2.00 kg/cm <sup>2</sup> (28.4 PSI)		2.00 kg/cm <sup>2</sup> (28.4 PSI)	
	Rear (Solo)	: 2.00 kg/cm <sup>2</sup> (28.4 PSI)	2.10 kg/cm <sup>2</sup> (30 PSI)		2.10 kg/cm <sup>2</sup> (30 PSI)	
	Rear (Pillion)	: 2.25 kg/cm <sup>2</sup> (32 PSI)	2.15 kg/cm <sup>2</sup> (30.5 PSI)		2.25 kg/cm <sup>2</sup> (32 PSI)	
Electrical System		: 12 Volts DC	12 Volts DC		12 Volts DC	
Battery		: 12V - 4Ah VRLA	12V - 4 Ah VRLA		12V - 9 Ah MF	
Head Lamp		: 35/35W, HS1	35/35W, HS1		35/35W, HS1	
Pilot Lamp		: 5W Each 2 Nos.	5W Each 2 Nos.		5W Each 2 Nos.	
Tail /Stop Lamp		: LED	LED		LED	
Turn Signal Lamp		: 10W (4 nos.)	10W (4 Nos.)		10W (4 Nos.)	
Neutral Indicator		: LED	LED		LED	
Hi Beam Indicator		: LED	LED		LED	
Turn Indicator		: LED	LED		LED	
Side Stand Indicator		: LCD	LCD		LCD	
Speedometer Illumination		: LCD Amber	LCD Blue		LCD Blue	
Low battery indicator		: LED	LED for Non ABS, LCD for ABS		LED for Non ABS, LCD for ABS	
ABS Indicator		: Not applicable	LED		LED	
Rear No. Plate Lamp		: 3W	3W		3W	
Horn		: 12V DC	12V DC		12V DC	
Vehicle Kerb Weight		: Non ABS      ABS	Non ABS      ABS		Non ABS      ABS	
		: 144 kg.      Not applicable	144 kg.      148.2 Kg		146 kg.      149.2 Kg	
Gross Vehicle Weight		: 274 kg.      Not applicable	274 kg.      278.2 Kg		276 kg.      279.2 Kg	

## Identification Data



The Frame and Engine serial numbers are used to register the motorcycle. They are the unique alpha-numeric codes to identify your particular vehicle from others of the same model and type.




### Frame Number Location

On Side of Steering Tube  
(Alpha-Numeric - 17 Digits)

### Engine Number Location

On LH Side Crankcase Near Gear  
Change Lever (Alpha-Numeric - 11 Digits)

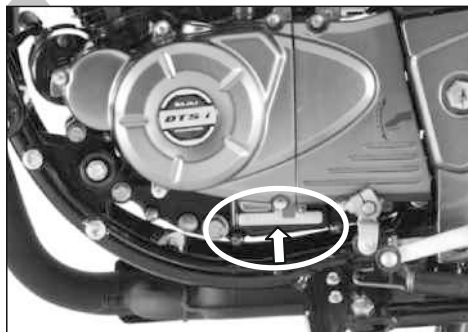

## Location of Parts

*pulsar*



This photograph is of Pulsar 180 Non ABS





**To Lock the Steering :** To lock the steering, turn the handle bar to the left or right. Push & release the key. Turn the key to “LOCK” position and remove the key.


**To Unlock the Steering :** To unlock steering, insert the key in steering cum ignition lock & turn it clockwise to “OFF” or “ON” position.

**Key :** A common key is used for ‘Steering cum Ignition lock’, ‘Fuel tank cap’ & ‘Side cover lock’.

## Steering cum Ignition Lock :

It has three positions.

●	<b>LOCK:</b> Steering locked. Ignition OFF.
❓	<b>OFF:</b> Steering unlock. Ignition OFF.
❓	<b>ON:</b> Steering unlock. Ignition ON.

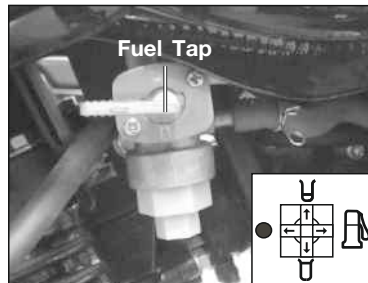

## Fuel Tap

Fuel tap lever has following positions.

●	OFF : When fuel supply is to be cut off.
U	ON : When fuel level is above reserve position.
⌋	RES : When fuel level is below reserve position.



### Fuel Tank Cap

- To open the fuel tank cap, open the flap. Insert the key in the lock and turn it clockwise and lift fuel tank cap.
- To lock the 'Fuel Tank Cap' insert the key in the lock and turn it clockwise and press fuel tank cap. 'Click' sound ensures cap is fully locked.

#### Precaution :

Dont attach metallic 'Key chain' as it may damage paint of petrol tank.

**Single Channel ABS unit for Front brake is fitted on this vehicle.**

#### ABS System Information:

- Always maintain a safe distance between you and objects ahead. Vehicle speeds should always be reduced during extreme road conditions. The braking distance for motorcycle equipped with an anti-lock braking system may be longer than for those without it on rough road conditions. During these conditions the vehicle should be driven at reduced speeds.
- When you apply Front brake under conditions which may lock the wheels, you feel a corresponding sensation (pulsation) in Front brake lever. This is normal and it means your ABS is active.
- Also it is recommended to use both front & rear brakes simultaneously.
- Always slow down when cornering. The anti-lock brake system cannot prevent accidents resulting from excessive speeds.


## Speedometer Details - ABS


*pulsar*



1. **Side Stand Indicator** : It glows when Side stand is down & ignition switch is 'ON'.
2. **Fuel Level Indicator** : Fuel level indicator shows available fuel in fuel tank. Tank symbol glows when petrol level in tank reaches reserve level
3. **Engine Rev Indicator** : It blinks when engine RPM cross 9000 RPM mark.
4. **Tachometer Dial** : It shows engine speed in RPM.
5. **Odometer** : The Odometer shows the total distance that the vehicle has accumulated.
6. **Turn Indicator (LH & RH)** : When Turn signal switch is turned to L/R, Turn indicator - LH or RH will flash.
7. **Speedometer**: Vehicle speed will be displayed digitally
8. **Trip Meter Reset Button** : Both trip meters can be

reset to zero by pressing the button.

9. **Trip Meter** : The Trip meter shows the distance traveled since it was last reset to zero.
10. **Battery Indicator** : It shows battery needs charging
11. **Hi Beam Indicator** : It glows when Headlight is 'ON' & Hi beam is selected with engine running.
12. **Neutral Indicator** : It glows when transmission is in Neutral & Ignition switch 'ON'.
13. **Bajaj Logo** : Bajaj logo flying 'B' glows.
14. **ABS Indicator** (  ): With Ignition switch ON the ABS indicator glows. When vehicle speed is more than 5 Km/h the ABS indicator goes off, if this indicator glows while vehicle is running, it means there is problem in ABS unit.

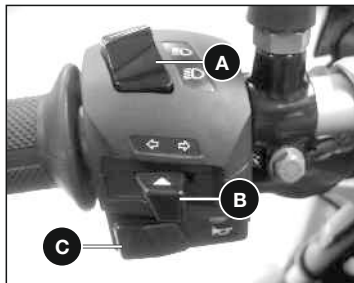

## Left Handle Bar Switches


**A. High/Low beam switch :** When headlight is ON, High or Low beam can be selected with this switch. Hi beam indicator light located on Speedo console will light up when high beam is selected.

☰ : High Beam      ☷ : Low beam

**B. Turn Signal Switch :** When the turn signal knob is turned to Left (↶) or Right (↷) respective indicator will start blinking, to stop blinking push the knob in & release.

**C. Horn Button :** ( 📢 ) Press button for sounding horn.

**D. Pass Switch :** Press the switch to flash the head light. It is used to give signal to vehicles coming from opposite side while overtaking.

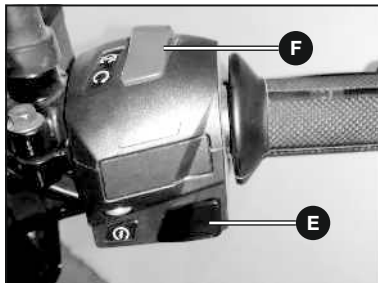

## Right Handle Bar Switches

### E. Starter Button :

Starter button operates the electric starter. It is recommended to start the engine with the transmission in neutral.

Vehicle in Gear - Press clutch lever & operate starter button to start the engine.

### F. Engine Kill Switch :

The engine kill switch is used for switching ON & OFF the engine.

⊗ : Engine OFF

⊙ : Engine ON

## AHO Feature (Automatic Headlight 'ON')

There is no 'Light switch' on RH control switch.

### (P 150)-Ignition switch 'ON' & Engine Running

### (P 180)-Ignition switch 'ON' & Engine OFF

Speedometer illumination, Tail lamp, Number Plate Lamp, Pilot Lamp & Control Switches Illumination will get 'ON'

in addition to above, headlamp will get on as given below chart.

Effect of pressing-In addition to above 'Pass Switch' Hi-beam will get 'ON'

Hi/Low beam Switch	Headlamp Status	Effect of Pass Switch
Low beam ⊗	Low beam 'ON'	Hi beam 'ON'
Hi beam ⊙	Hi beam 'ON'	No change



Fig. Side Cover LH

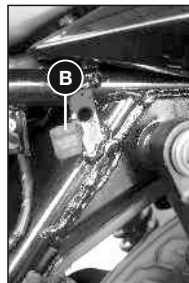
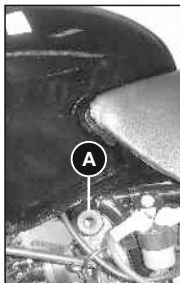


Fig. Side Cover RH

### Removal of Side Cover LH



- Insert key into the cover lock & turn clockwise and pull the 'Side Cover' out from the bottom.
- Pull front portion of 'Side Cover' to release its Lug from hole **(A)** of 'Fuel Tank'.
- Slide the 'Side Cover' forward (towards the engine) to release slot provided on its rear end from 'bracket with rubber cap' **(B)** provided on 'Chassis'.
- Take out side cover.

### Removal of Side Cover RH

- Remove the screw (C) securing the 'Side Cover RH'.
- Pull front portion of 'Side Cover' to release its Lug from hole **(A)** of 'Fuel Tank'.
- Slide the 'Side Cover' forward to release slot provided on rear end of 'Side Cover' from 'bracket' **(B)** provided on 'Chassis'.
- Take out side cover.



**CAUTION :** Remove cover as described above, Otherwise the lugs may break.

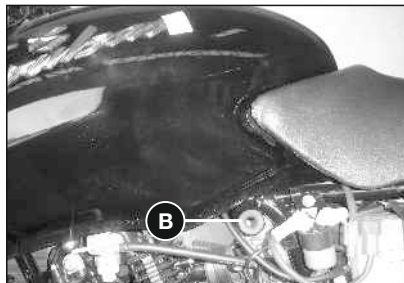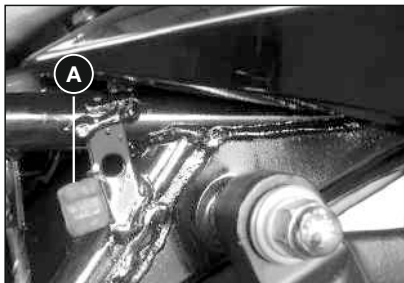

### Fitment of Side Cover LH


- Match slot provided on rear end of 'Side Cover' with bracket **(A)** provided on 'Chassis' and slide 'Side Cover' backward (towards Tail lamp).
- Match Lug provided on front portion of 'Side Cover' with hole **(B)** provided on 'Fuel Tank' and press 'Side Cover' inside.
- Match the lock plate of 'Side Cover' properly with bracket on 'Chassis' and rotate key in clockwise direction to lock.

### Fitment of Side Cover RH

- Match slot provided on rear end of 'Side Cover' with bracket **(A)** provided on 'Chassis' and slide 'Side Cover' backward
- Match Lug provided on front portion of 'Side Cover' with hole **(B)** provided on 'Fuel Tank' and press 'Side Cover' inside.
- Match 'Side Cover RH' properly with bracket provided on 'Air filter assly' & fix it with Screw.



**CAUTION :** Fit cover as described above to ensure proper fitment.

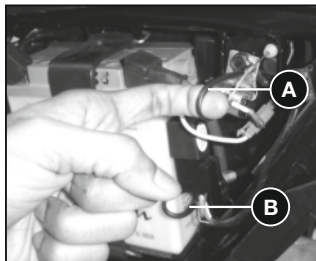

Seat Release Cable

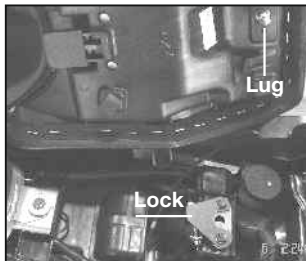


Fig. B

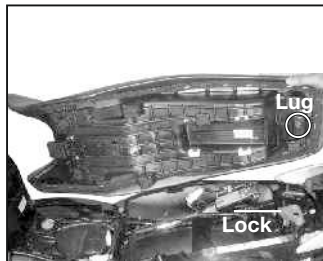



Fig. C

### Removal of Seat- Front & Rear (Pulsar 150 Twin Disc / 180)

- Remove 'Side Cover' LH.
- Pull rear seat lock cable (A) & remove 'Rear Seat'
- Similarly pull the front seat lock cable (B) & remove 'Front Seat'.

 **CAUTION:** Always remove Rear seat first.


For Pulsar 150 follow procedure as given below

### Removal of Seat assembly complete

- Remove 'Side Cover' LH.
- Pull seat lock cable (A) & remove the seat complete.

### Fitment of Seat- Front & Rear (Pulsar 150 Twin Disc / 180)

- Both the seats can be fitted by matching their lug with the respective lock & pressing down the lug into lock.

 **CAUTION :** Always fit Front seat first.

For Pulsar 150 follow procedure as given below

### Fitment of Seat assembly complete

- The seat assembly can be fitted by matching its lug with the lock & pressing down the lug into the lock.





**Pulsar 180**

### Battery

- It is located inside the 'Side Cover' LH.
- Always maintain electrolyte level in each cell between max and min level lines.
- Always keep a watch on battery charge level indicating icon, if it flashes (indicates battery is in low charged condition), show the vehicle to authorised BAL dealer.



**CAUTION :** Do not drive/run vehicle in battery disconnected condition. It may lead to damage of electrical / electronic components.



**Pulsar 150 / 150 Twin Disc**



### Tool Kit Location

- It is located below the battery.
- 2 rubber straps are provided to hold the tool kit.

### First Aid Kit Location

- First aid kit is to be stored in seat cowl.



**CAUTION :** Always fit rubber strap for locking tool kit.

Before riding motorcycle be sure to check following items. Please give proper importance to these checks and perform all of them before riding motorcycle.

If any irregularities are found during these checks, refer to the Maintenance chapter & see your dealer for the action required to return the motorcycle to a safe operating condition.



**Warning :** Failure to perform these checks every day before you ride may result in serious damage or severe accident.

- Enough **fuel level** for planned distance of journey. No fuel leakage in fuel lines.
- **Engine oil** level (between upper and lower level mark)
- **Throttle cable** play of 2 ~ 3 mm. Smooth operation and positive return to closed position,
- **Brake Pedal** Play-Drum Brake 15 to 20mm  
Disc Brake-Fixed
- **Wear lining Indicator** within usable range. No brake dragging, applicable to drum brake vehicles.
- **Brake Fluid** level above MIN mark provided on reservoir, applicable to disc brake vehicle.
- **Drive Chain** slack of 20 to 30 mm adequately lubricated.
- Function of all **lights & horn**
- **Clutch lever** play - 2 to 3 mm
- Smooth **steering movement** without restriction.
- Both **stand** return to their fully up position.
- Correct **inflation pressure** in both tyres  
Adequate tyre tread depth - no cracks / cuts.
- Correct **rear viewing** span adjustment of mirror.

## Starting The Engine :

- Turn the fuel tap knob to 'ON' or 'RES' position.
- Switch 'ON' ignition & 'Kill Switch'
- Confirm that transmission is in neutral.
- Keep throttle completely closed, press starter button "Ⓢ" to start the engine.
- Release starter button as soon as engine starts.

**Note :** Do not let the engine idle longer than 3 minuets otherwise it will overheat.

- If the engine is cold or when starting for first time, use choke 'Ⓢ' for quick starting.



- When the engine is warmed up enough to idle without using choke, return the choke to OFF position.

**Manual Choke**



**Caution :** Do not operate the starter continuously for more than 5 seconds otherwise battery would get discharged. Wait 15 sec. between each operation of the starter which will facilitate battery to recover.

**Note :** The motorcycle is equipped with a clutch switch. This switch ensures that engine does not start if the transmission is in gear.


However, the engine can be started in any gear if the clutch lever is pressed.

## Moving Off :

- Check that Center/Side stand is up.
- Depress the clutch lever.
- Shift into 1<sup>st</sup> gear.
- Open the throttle and release the clutch lever slowly and simultaneously.
- As the clutch starts to engage, open the throttle a little more, giving the engine just enough rpm to keep it from stalling.

## Shifting Gears :

- Close throttle & depress the clutch.
- Shift into next higher or lower gear.
- Open the throttle and release the clutch lever slowly and simultaneously.

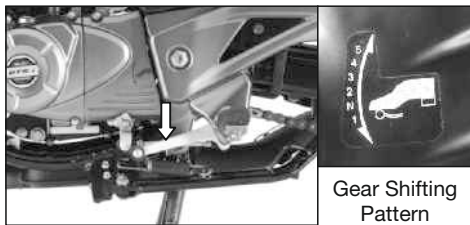

Gear Shifting Lever

Gear Shifting Pattern

## Recommended Speed for Shifting Down

From 5 <sup>th</sup> to 4 <sup>th</sup> Gear	45 km/h
From 4 <sup>th</sup> to 3 <sup>rd</sup> Gear	35 km/h
From 3 <sup>rd</sup> to 2 <sup>nd</sup> Gear	25 km/h
From 2 <sup>nd</sup> to 1 <sup>st</sup> Gear	15 km/h



**Warning :** When shifting down to lower gear, do not shift at such high speed that engine rpm jumps excessively. This may cause engine damage, & rear wheel may skid. Downshifting should be done at recommended speeds as shown in table.

## Braking :


- Close throttle completely, leaving clutch engaged (except where shifting gears) so that engine braking will help slow down motorcycle.
- Shift down one gear at a time so that you are in Neutral when you come to a complete stop.
- Front brake is to be used to get maximum braking performance.
- Rear brake is to be used when more deceleration is required.
- When stopping, always apply both brakes at the same time. De-clutch as necessary to avoid engine stalling.

## Stopping the Vehicle :

- Close the throttle completely.
- Shift the transmission into neutral.
- Bring the vehicle to complete stop.
- Turn the ignition switch off.

## Parking the Vehicle :

- Support the motorcycle on a firm level surface with the center or side stand.
- Lock the steering.

 **CAUTION** : Do not park on a soft or steeply inclined surface or the motorcycle may fall over.

**Whenever vehicle is falls down, remove plug of 'Y connector drain tube' & drain out accumulated petrol**



## Running IN

Proper running-in is important for the better life & trouble free performance of the vehicle.

- During first 2000 kms running-in period do not exceed following speed limits.

Kms	1st	2nd	3rd	4th	5th
0 - 1000	10	20	30	35	45
1000 - 2000	15	30	40	45	55

- Always keep the speed below the limits mentioned in the table.
- Do not race the engine excessively.
- Do not start moving or race the engine immediately after starting. Run the engine for a minute at idle speed to give the oil a chance to workup into the engine.

## Fuel Saving Tips :

A well maintained vehicle and good driving can contribute a lot to the saving of petrol. Following are a few simple fuel saving tips.

## Good Riding Habits :

- Ride smoothly and steadily at an optimum driving speed of 40 to 50 Km/h
- Avoid harsh braking.
- Change the gear judiciously according to the speed and load requirement.
- Don't overload the vehicle above the specified payload.
- Use the accelerator judiciously.
- Cut off the engine if you want to stop for more than two minutes.

## How to check mileage (Fuel efficiency)

Best way to calculate mileage is by following the full tank to full tank method.

- Fill way tank full up to small mouth (brim).
- Run the bike for say 100 km.
- Fill the tank full again in same fuel filling station, probably with same fuel dispenser.
- Divide kilometer run / fuel quantity filled.

**Ensure following maintenance points to get optimum performance from your bike.**

Fuel	Check fuel lines & connections for leakage.
Spark Plugs	Inspect and clean spark plugs. Adjust electrode gap. Replace spark plugs as per P.M. Chart.
Air Filter	Clean the air filter element periodically. Replace as per Periodic Maintenance Chart.
Engine Oil	Check engine oil level. Always use recommended grade and quantity.
Brakes	Ensure that the brakes are not dragging / binding.
Clutch	Ensure correct clutch lever play.
Tyre Air Pressure	Always maintain recommended tyre pressure.
Carburettor	Clean & adjust the carburettor. Adjust idling speed.

## Safe Riding Tips


- Always wear Helmet while driving or riding. Your helmet should conform to appropriate Indian standards.
- Read thoroughly the instructions given in this manual and follow them carefully.
- Avoid unnecessary accessories for the safety of both rider and other motorists.
- Get familiar and follow traffic rules & regulations in your states as well as general traffic signs.
- Familiarise yourself well with starting, acceleration and braking of the vehicle.
- When applying the brakes, use both front & rear brakes simultaneously. Applying only one brake may cause the vehicle to lose control.
- Riding at proper speed and avoiding unnecessary acceleration and braking are important not only for safety and low fuel consumption, but also for longer life of the vehicle.
- During monsoon drive the vehicle more cautiously. Remember vehicles skid more easily during light showers.



- Drive cautiously. Start early & reach your destination safely.
- Always carry vehicle registration & insurance papers, and a valid driving licence with you.
- Avoid driving on loose sand or stones where vehicle is likely to skid.
- Properly wrap-up loose clothes while driving or riding to avoid entangling in wheel or other objects on road.
- Always concentrate on riding for safety.

## Monsoon Care :

- It is suggested to customer to take appropriate care in area of heavy monsoon or high rainfall area. The appropriate surface preventive coat to avoid rusting / poor surface finish on account of adverse atmospheric conditions.
- Vehicle cleaning to be done with soft & clean wet cloth to avoid scratches on painted parts.
- Clean & lubricate all the important parts as detailed in a periodic maintenance chart.
- Do not apply direct water jet on painted, electrical / electronic parts.
- Do not obstruct engine cooling by adding mud protection sheet from front.

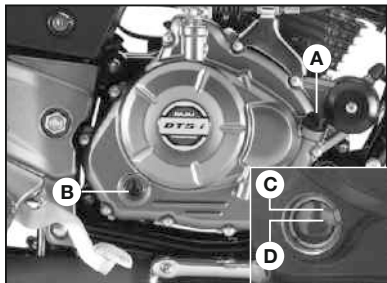

**A : Oil Filler Cap, B : Oil Level Gauge**

## Engine Oil Level Checking :

- Check engine oil level every day. Park vehicle on level surface on centre stand.
- Check oil level through oil level gauge 'B'.
- Always maintain engine oil level between upper (C) and lower (D) mark provided on Cover RH. Top up with specified grade of oil if the oil level is below lower level mark.

## Engine Oil Capacity :

- Refill at servicing : 1000 ml.
- During engine overhaul : 1100 ml.

## Recommended Engine Oil:

Always insist on Bajaj Genuine Engine Oil for optimum engine performance and warranty benefits. It is a specially formulated oil for vehicles with DTS-i engines.



Model	Recommended Engine oil	Grade
Pulsar 150/180 150 Twin Disc	Bajaj DTS-i 10000	SAE 20W50 API 'SL' or JASO 'MA'

- **Engine oil replacement frequency : 1<sup>st</sup> service & then every 10,000 Km.**
- **Engine oil level top-up frequency : Every 5000 km.**



## CAUTION :

- It is most important to adhere to recommended grade & frequency of oil change for the purpose of long life of critical engine components. For details refer periodic maintenance chart.
- Do not reuse drained oil.





### Tubeless Tyre :

The main advantage of tubeless tyres is in case of puncture the rate of air leak is very slow, hence customer can easily drive the vehicle upto nearest puncture repair shop for removing puncture.



**CAUTION :** Tubeless tyres are fitted in this motorcycle. The walls of the tyres in contact with the wheel rim should not be damaged in any way during fitment / removal of tyre. The tyre side walls in contact with wheel rim seals air.

### Wheel Puncture:


- Visit nearest known tubeless tyre repair shop to remove puncture.
- Remove puncture by Filler or Plug method only.
- Do not use patch method to remove puncture of tubeless tyre.

### Tyre Pressure :

Keep appropriate tyre pressure as mentioned below to increase life of the tyre & for better fuel consumption.

Model-->	Pulsar 150	Pulsar 150 Twin Disc / 180
Front	25 PSI	28.4 PSI
Rear (Solo)	28.4 PSI	30 PSI
Rear (with Pillion)	32 PSI	32 PSI

**Note :** Incase the motorcycle is fitted with imported tyres. compliance to respective indian standard & central motor vehicle rules has been ensured.

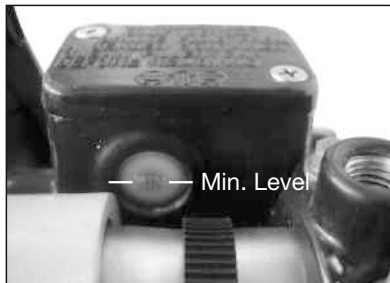

### Front Brake Fluid Level :

- Front brake fluid reservoir is located on RH side of Handle bar.
- To check oil level, keep the vehicle on center stand with handle bar in straight ahead condition.
- Always ensure that brake fluid level is above 'MIN' mark given on inspection Window.



12V- 9 Ah MF



12V- 4 Ah VRLA

### Battery : 12V-9 Ah MF, For Pulsar 180

- Battery is located inside 'Side Cover' LH.
- Always ensure that battery electrolyte level is in between max & min level marks.
- Check & top up battery by distilled water if electrolyte level is below min level mark.
- Battery life would get adversely affected if top up with 'Tap Water'.



**CAUTION :** Tap water is not a substitute for distilled water and will shorten the life of the battery.

**Battery :** 12V, 4 Ah VRLA For Pulsar 150  
& 150 Twin Disc

### **Battery Features :**

- No topping-up is required
- Reduced self discharge, Enhance safety.
- No vent tube open to atmosphere hence no discharge of electrolyte through vent tube.
- Environment care must be taken to dispose off the used battery. It is always recommended to hand over the same to the Authorised battery / Bajaj dealer for proper disposal of the same.
- When battery is found discharged, it is advised to get it charged immediately.



**CAUTION :** Do not drive/run vehicle in battery disconnected condition. It may lead to damage of electrical /electronic components.

- Warranty on battery is 18 months from the date of purchase of vehicle.

### **How to keep battery healthy ?**

- Switch 'Off' ignition when engine is not running.
- Get battery checked / charged during periodic services.
- Do not press starter button for more than 5 sec. After 3 successive cranking, wait for 15-20 sec. for battery to recover.
- **Do not add extra electrical accessories such as - Remote, Bigger horn, Musical brake light etc. This will reduce life of battery**
- If vehicle is to be stored for more than 2 weeks disconnect battery to avoid self discharge.



### **CAUTION :**


- While disconnecting always disconnect negative (-ve) cable first.
- While refitting always connect positive (+ve) cable first.

### Spark Plug

- Remove spark plugs by using plug spanner.
- Clean the spark plugs.
- Adjust the gaps if incorrect by bending outer electrode carefully.


**Spark Plug Gap** : 0.7 to 0.8 mm.

**Spark Plug** (2 Nos.) : CHAMPION RG4HC

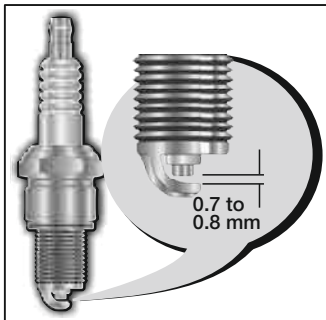


### Drive Chain Slackness

- Chain top edge to be kept between the two marks during chain slackness adjustment.
- Chain slackness will have to be adjusted whenever required.
- Std. Chain slackness 20 ~ 30 mm.
- Marking on chain adjusters should be identically positioned on both sides.

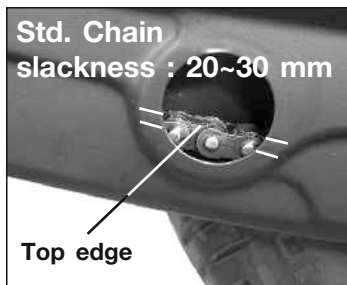

**Drive  
Chain  
Cleaning**

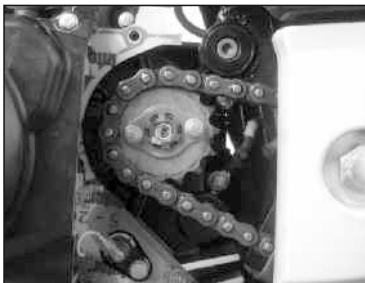

Drive chain must be cleaned & lubricated as per periodic maintenance schedule.

**a. Drive chain (Non O-ring type)**

- Non O-ring type chain should be removed & cleaned by Nylon brush & Kerosene or in Chain Cleaning Machine.
- It should be lubricated by SAE 90 grade oil.

**b. Drive chain (O-ring type)**

- 'O' rings must always be kept wet for best performance hence lubricate every 500 Kms
- O-ring chain lubrication can easily be done by owners using Bajaj 'Chain Lube Spray Can' available with Bajaj dealers.



**Drive  
Chain  
Lubrication**

**Method of O-ring Chain Lubrication :**

- Place the bike on centre stand.
- Clean the chain by using lint free cloth (If excessive mud / slush found approach Bajaj Service Center for proper cleaning)
- Shake the can vigorously by holding vertically upright till the noise of steel ball inside heard uniformly.
- Hold spray can at the back of rear sprocket with extension tube nose at 5~10 cm.
- Rotate the wheel in reverse direction & spray the lube on middle portion of the chain up to full length of the chain.

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	RECOMMENDED FREQUENCY								Subsequent
		Servicing	1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
		Kms	500 750	4500 5000	9500 10000	5000 Km after Previous Service				
1.	Water wash & dry the vehicle completely		✓	✓	✓	✓	✓	✓	✓	Ensure to prevent water entry in Petrol tank, Silencer & electrical Parts. Use caustic free detergent for washing.
2.	Engine oil (Bajaj DTSi 10000 oil)	C,R	<div>R</div>	Top Up	<div>R</div>	Top Up	<div>R</div>	Top Up	<div>R</div>	BGO DTSi 10W30 for 100cc models. BGO DTSi 20W50 for Models above 125cc.
3.	Engine oil filter**	C,R	<div>R</div>		<div>R</div>		<div>R</div>		<div>R</div>	
4.	Oil strainer	CL	CL		CL		CL		CL	
5.	Body centrifugal filter**	CL	CL				CL		CL	
6.	Starter Clutch (Dry Type)**	L		L	L	L	L	L	L	Use recommended Molycote grease.
7.	Spark plug	CL,A,R			CL,A		CL,A		<div>R</div>	
8.	Air cleaner element ***	CL,R	CL	CL	CL	<div>R</div>	CL	CL	<div>R</div>	

✓ Tick in the box ☐ R after replacing the periodic parts.

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY							Subsequent
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
			Kms	500 750	4500 5000	9500 10000	5000 Km after Previous Service			
9.	Air filter cover 'O' ring	CL,R	CL	CL	CL	<div>R</div>	CL	CL	<div>R</div>	
10.	In line paper filter**	R				<div>R</div>			<div>R</div>	
11.	Fuel cock paper filter**	R				<div>R</div>			<div>R</div>	
12.	Fuel cock sediment bowl cleaning**	CL				CL			CL	
13.	Carburettor rubber duct	C,R					C,R			
14.	Fuel pipe	C,R	C	C	C	<div>R</div>	C	C	<div>R</div>	
15.	Valve tappet clearance	C,A			C,A		C,A		C,A	
16.	Non-Sealed drive chain cleaning & lubrication**	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	
17.	Sealed drive chain cleaning & lubrication**	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	CL,L,A	Customer to apply OKS chain lub spray at every 500 kms.
18.	Engine air breather tube	C	C	C	C	C	C	C	C	
19.	Silencer drain hole cleaning	CL		CL	CL	CL	CL	CL	CL	

✓ Tick in the box ☐ R after replacing the periodic parts.

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation	Servicing	RECOMMENDED FREQUENCY							Subsequent
			1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
			Kms	500 750	4500 5000	9500 10000	5000 Km after Previous Service			
20.	Silencer tail pipe cleaning**	CL		CL	CL	CL	CL	CL	CL	
21.	Brake cam & brake pedal pivot pin**	C,L,R	C	C,L,R	C,L,R	C,L,R	C,L,R	C,L,R	C,L,R	Use AP grease.
22.	Brake lining or pad - Check wear indicator		C,R	C,R	C,R	<div>R</div>	C,R	C,R	<div>R</div>	
23.	Brake fluid level **- top up / replace	C,A,R				C,A			<div>R</div>	Use recommended brake fluid (DOT3/DOT4)
24.	Disc brake assly -- Check functionality, leakage or any other damage**	C			C		C		C	
25.	All cables & rear brake pedal-free play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
26.	Battery electrolyte level, specific gravity	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	Not applicable for VRLA battery
27.	Wiring harness & Battery connections- routing, tie bands & clamps tightness.	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	C,A,T	
28.	Ignition switch barrel cleaning	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	Use WD40 spray

✓ Tick in the box ☐ R after replacing the periodic parts.



# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation		RECOMMENDED FREQUENCY							Subsequent
		Servicing	1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
		Kms	500 750	4500 5000	9500 10000	5000 Km after Previous Service				
29.	Handle bar control switches contacts cleaning	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	C,CL	Use WD40 spray
30.	Steering play	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	
31.	Steering stem bearing*** & Cap steering bearing (Plastic)**	C,CL,L,R			C,CL, L,R		C,CL, L,R		C,CL, L,R	Check & replace if Damaged. Use HP Lithon RR3 grease for lubrication.
32.	Main stand & side stand pin**	CL,L			CL,L		CL,L		CL,L	Use AP grease.
33.	Swing arm pivot pin (for non silent bush)**	L		L	L	L	L	L	L	
34.	All fasteners tightness	C,T	C,T	C,T	C,T	C,T	C,T	C,T	C,T	
35.	Engine foundation silent bushes**	C				C			C	
36.	General lubrication-Clutch lever, front brake lever, kick lever.	L	L	L	L	L	L	L	L	Use AP grease.
37.	Idle speed / CO%	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	

✓ Tick in the box ☐ after replacing the periodic parts.

# Periodic Maintenance & Lubrication Chart



Sr. No.	Operation		RECOMMENDED FREQUENCY							Subsequent
		Servicing	1 <sup>st</sup> Free	2 <sup>nd</sup> Free	3 <sup>rd</sup> Free	Every				
		Kms	500 750	4500 5000	9500 10000	5000 Km after Previous Service				
38.	Coolant level in expansion tank**	C,A	C,A	C,A	C,A	C,A	C,A	C,A	C,A	Use recommended 'Ready to use coolant'.
39.	Coolant hose damage/clamps/leakage**	C		C	C	C	C	C	C	
40.	Radiator fins**	C		C	C	C	C	C	C	
41.	Spoke tightening**-Front & Rear	C,T	C,T	C,T	C,T	C,T	C,T	C,T	C,T	
42.	Front fork dust seal & Rubber bellow	CL		CL	CL	CL	CL	CL	CL	
43.	SAI, EVAP hoses - Check functionality, leakage or any other damage**	C,R	C,R	C,R	C,R	C,R	C,R	C,R	C,R	Replace if cut / damaged
44.	EVAP drain tube cleaning**	CL	CL	CL	CL	CL	CL	CL	CL	

✓ Tick in the box ☐ after replacing the periodic parts.

\*\* As applicable to model

\*\*\* More frequent cleaning may be required while driving in dusty environment.

**C : Check, A : Adjust, CL : Clean, R : Replace, T : Tighten, L : Lubricate**

**Note :** Periodic parts, Oil, Coolant, Filters, All types of greases, Cleaning agents, Cables, Wear & tear parts, Rubber 'O' rings / oil seals / pipes, Gaskets to be replaced as per Periodic Maintenance and Lubrication Chart are mandatory and the same are chargeable to customer.

# Free Service Guidelines

Customer ID :

## Instruction to avail Free Service through Digitized Free Service Coupon

Please follow following procedure : -

- Please provide your mobile number to Dealer at the time of buying of new Bajaj Vehicle.
- In case of change in mobile number, please update to Dealer / ASD.
- You will receive the Customer ID through SMS at the time of buying of new vehicle.
- Please note the Customer ID in Owner's Manual for your reference.
- During Free Service, please provide your Customer ID to Dealer / ASD workshop.
- When you are at Dealership / ASD workshop for Free Service, you will receive the 'Unique Coupon Number' (UCN) through SMS in your mobile.
- Please inform the UCN to Dealer / ASD at the time of Free Service.  
(ASD-Authorised Service Dealer)

### Periodic Service Criteria

Service	Days	Kms	whichever occurs earlier
1st Free Service	30~45	500~750	
2nd Free Service	240	4500~5000	
3rd Free Service	360	9500~10000	
Subsequent Paid services	120 Days from last Service	Every 5000 Km after previous service	

**Availing all Free / Paid Services, replacing mandatory periodic parts & engine oil will entitle warranty eligibility.**

Non-use maintenance is necessary if a vehicle remains off road for a longer duration (more than 15 days\*\*). The correct and careful non-use maintenance carried out before storing the vehicle will prevent the vehicle from rusting and from such other non-operational damages like fire hazards.

- Clean the entire vehicle thoroughly.
- Empty the fuel from the fuel tank and carburettor float bowl (if fuel is left in for a longer time, the fuel will break and gummy substance could clog the carburettor).
- Remove spark plug & put several drops of engine oil into the cylinder. Kick engine over slowly a few times to coat cylinder wall with oil & install back spark plug.
- Set the vehicle on a box or a stand so that both wheels are raised off the ground.
- Spray oil on all unpainted metal surfaces to prevent rusting. Avoid getting oil on rubber parts or brake liners.
- Cover entire vehicle neatly. Make sure that storage area is well ventilated & free from any source of flames or spark.
- Fill 10% excess air pressure in both

wheels.

- Do not apply oil on front brake disc, to prevent rusting. If the front brake disc rusts during storage, do not attempt to clean it with soap water. The rust will go off automatically during first few application of brake.

### **\*\* For Battery :**

- a. Remove battery and keep it on wooden plank, in properly ventilated area.
  - b. Before taking the vehicle for use.
- Get the battery recharged from the Authorised Service Center / Battery Dealer.
  - Apply petroleum jelly on battery terminals.

### **Preparation for regular use after storage :**

- Follow daily safety checks.

*pulsar*

ENGINE NO. : 

				-				-					
--	--	--	--	---	--	--	--	---	--	--	--	--	--

Sold on.: \_\_\_\_\_

Customer's Name Mr/Mrs/Miss : \_\_\_\_\_

Address : \_\_\_\_\_ Contact No.: \_\_\_\_\_

I have taken possession of motorcycle along with the following items.

- |                   |   |
|-------------------|---|
| 1. Owner's Manual | 5. Standard Accessories                     |
| 2. 2 nos of key   | 6. Battery      Make _____ Sr. No. _____    |
| 3. Set of tools   | 7. Tyre    Fr      Make _____ Sr. No. _____ |
| 4. First Aid Kit  | Rr     Make _____ Sr. No. _____             |

The Vehicle has been delivered to my satisfaction & I have understood all terms and conditions of warranty, service schedules & maintenance tips and shall abide by them.

Dealer Code :

Dealer Name :

Address :

Customer's Signature (To be filled in by the dealer) Contact No. :

Imp - "Do not detach this page from Owner's Manual"

Bajaj Auto Limited gives the following warranty in respect of the **“Pulsar 150/150R/180”** motorcycle manufactured by them.

Every possible care and precaution has been taken to ensure quality in respect of the material & workmanship in the vehicles manufactured by us. Bajaj Auto Limited will repair or replace at their Authorised Workshops, free of charge, part or parts thereof as may be found, on examination, to have manufacturing defect within a period of **5 Years or 75,000 Kms.**, whichever occurs earlier from the date of sale subject to fulfillment of condition stipulated in part A, B & C given here under

**Warranty is applicable for only first owner of vehicle.**

### **Part A:**

Warranty claims in respect of such items like shock absorbers, speedometers etc. though claimed through us, are subject to acceptance of the respective manufacturers. In all such cases the decision of the respective manufacturer will be final and binding.

Proprietary parts like tyres, tubes, battery and spark plugs are warranted by their respective manufacturers and should be claimed on them directly by the customer. Bajaj Auto Limited shall not be Liable to replace them

though their dealer will give full assistance in preferring such claims.

Bajaj Auto Limited undertake no liability in the matter of consequential loss or damage caused due to the failure of the parts. Delay, if any, at the repairing workshop in carrying out repair to vehicle shall not be a ground for extending the warranty period, nor shall it give any right to the customer for claiming any compensation for damages.

Bajaj Auto Limited reserves the right either to repair or replace the defective parts.

Where a defective part can be replaced by part/s of alternative brand/s, which are normally used by Bajaj Auto Limited in the course of manufacture, Bajaj Auto Limited reserves the right to carry out the replacement by a part or parts of any such alternative brand/s.

This warranty and any claim arising there from is subject to Pune jurisdiction only.

### **Part B:**

No claim for exchange or repair can be considered unless the customer :

- a. Ensures that immediately upon detection of the defect, he approaches any nearest Authorised Bajaj Vehicle Dealers & Recommended Authorised Service Dealers with the concerned vehicle and enables him

to remove and despatch the part / parts attributing to the manufacturing defect to the Company.

- b. Produces the Owner's Manual, in original, to enable that dealer to verify the details.

It must be expressly understood that claims forwarded directly to us by the owner / customer will not be entertained at all and such defective part/parts thus forwarded by them will lie at our factory at their own risk, and this warranty shall not be enforceable.

### **To avail benefits of warranty, following are mandatory**

1. Availing of Initial 3 Free Services without lapse.
2. Availing paid services at subsequent 5000 kms. or 120 days from last service whichever occurs first without any lapse.
3. Availing of all above services at the Authorised Vehicle Dealers & Recommended Authorised Service Dealers.
4. Usage of only recommended engine oil "**Bajaj DTS-i 10000**" at specified frequency for drain interval of 10,000 kms. & engine oil level top-up at 5000 kms.
5. Replacing mandatory periodic parts such as air filter, oil filter etc. as per periodic maintenance schedule.

### **Part C :**

Further this warranty is NOT applicable to :

1. Normal maintenance operations like brake & clutch adjustments, cleaning of fuel system, engine tune-up or such other adjustments.
2. Parts subjected to normal wear & tear like Clutch Plates, Brake Shoes, Chain, Sprockets, Fork Oil Seal, Spark Plug, Control Cables, Brake Pads.
3. Replacement of bulbs & rubber components like grommets, 'O' rings, bellows as well as filters, packings, gaskets, fasteners etc.
4. Painted parts. Only blistering or peeling off of paint film are covered under warranty. Any defect arising out of external damages or due to usage of protective covers /non-recommended protective coatings adverse atmospheric condition etc. is not allowed under warranty.
5. All consumables like Engine oil, Fork oil, Brake Oil, Grease etc. are chargeable to customer.
6. Any defect arising due to above consumables not changed as per scheduled or if used other than the recommended one.
7. Never drive your bike through flooded roads or a flooded patch, damage to the engine parts due to water entry is not covered under warranty.

8. All chrome plated parts are prone to rust or corrosion in coastal area or in acidic environment or due to neglected cleaning etc. However chrome film peeling is covered under warranty in general atmospheric conditions. Blue/ Yellow colouration of silencer near exhaust port is permissible and hence not covered under warranty.
9. Oxidation of unpainted/painted crankcase, cylinder block, cylinder head etc. in acidic environment or in a coastal area.
10. Parts of the vehicle that have been subjected to misuse, accident, negligent treatment OR which have been used in conjunction with parts & an equipment not manufactured or recommended for use by Bajaj Auto Limited, if in the sole judgement of Bajaj Auto Limited, such use prematurely affects the performance and reliability of the vehicle.
11. Parts of the vehicle that have been altered and modified or replaced in unauthorized manner like use of wider tyres, loud silencers etc and which in the sole judgement of the Bajaj Auto Limited affects its performance and reliability.
12. **Vehicles which are not being serviced at recommended dealers as per the service schedule described or which have not been operated or maintained in accordance with the instructions maintained in the Owner's Manual.**
13. Vehicles used for any competition or race and/or for attempting to set up any kind of record.
14. Any failure arising due to use of adulterated or bad quality fuel.  
Parts affected due to bad fuel quality are not covered Under warranty.
15. If additional electrical accessories such as - Remote, Bigger horn, Musical brake light etc. fitted on vehicle.
16. If the vehicle has been used for commercial purpose like Taxi or any other means of commercial transportation.

Bajaj Auto Limited reserves the right to make any changes in design or to add any improvements on the vehicle at any time without incurring any obligation to install the same on a vehicle previously supplied and sold. Also, the conditions of this warranty are subject to alteration without any notice.

This warranty is the entire written warranty given by Bajaj Auto Limited for **"Pulsar 150/150R/180"** motorcycle' and no other dealer or its or his agent or employee is authorised to extend or enlarge this warranty.



# BATTERY WARRANTY CARD

MAKE OF BATTERY : .....

MFG. CODE OF BATTERY :

SR.NO.:

TYPE OF BATTERY : .....

DATE OF SALE : .....

NAME OF OWNER AND ADDRESS : .....

TYPE OF VEHICLE : ..... REG. NO.: .....

FRAME NO.: ..... ENGINE NO.: .....

## SERVICE RECORD

Sr. No.	Date	Age Mths.	Specific Gravity	Voltage	Remarks	Dealer's Stamp & Signature	* Code
1							
2							
3							
4							
5							
6							

### \* Code For Remarks:

- LL** : Low electrolyte level.  
**AE** : Electrical system needs attention.  
**IR** : Insufficient running of vehicle.  
**CB** : Cover broken.  
**BC** : Broken Container.  
**PM** : Poor maintenance.  
**BA** : Battery abused.

Note : Customer should insist that "Service Record" must be filled by respective authorised battery dealer as proof of specified maintenance for easy settlement of claim, if any.

## TO BE FILLED IN BY BATTERY DEALERS / DISTRIBUTORS IN CASE OF CLAIM

Name of Dealer & Code : \_\_\_\_\_

Date of claim : \_\_\_\_\_ Battery Type : \_\_\_\_\_

Serial No. : \_\_\_\_\_ Date of Fitment : \_\_\_\_\_

Failure Mode (Please tick as applicable)

- |                        |                                     |
|------------------------|-------------------------------------|
| • Loose connection     | • Overcharge / Undercharge          |
| • Internal Short       | • Reverse Charge                    |
| • Plate Shedding       | • High Specific Gravity Electrolyte |
| • Intercell Connection | • Electrolyte Contamination         |
| • Does not Hold Charge | • Electrolyte Level not Maintained  |
| • Wrong Assembly       | • Left Lying Idle                   |
| • Wrong Application    |                                     |
| • Terminal Corroded    |                                     |

# Claim Accepted

## Claim Rejected

Details of Repair, if any \_\_\_\_\_

Note:

Please contact nearest respective authorised battery dealer for details immediately after purchase of vehicle.

---

Use only Bajaj Genuine Parts

pulsar **DTS-i**  
220



THE WORLD'S  
FAVOURITE  
INDIAN

Always Use  
Bajaj Genuine  
High Performance  
Engine Oils

**4T**  
Premium  
Engine Oil

Synthetic oil for more engine life\*

BAJAJ  
**DTS-i**  
10,000

**20W 50**



Top up  
bottle  
100 ml.



BAJAJ  
**DTS-i**  
10,000

**10W 50**  
Synthetic



Top up  
bottle  
150 ml.



Long Drain Interval of **10,000 kms\***



Reduced Friction



Clean Engine Parts,  
Longer Engine Life



Smooth Clutch  
Control



\*As per customer's choice

\* Top up recommended at 5,000 kms



We are committed to provide the best of sales & service experience, however should you require any additional assistance, please call our Call centre on the number given below.



: 7219821111

Call charges are as applicable

**Call centre timings :- Monday to Sunday**  
**(09 : 00 am - 08 : 00 pm)**



Please download customer care app from '**Google play store**' and '**Apple store**' and book the vehicles for servicing and more on your phone.

E-mail : [customerservice@bajajauto.co.in](mailto:customerservice@bajajauto.co.in)

Web Site : [www.bajajauto.com](http://www.bajajauto.com)

CIN : L65993PN2007PLC130076

